



# ROOM AIR CONDITIONER

## INDOOR UNIT


AQ12\*5(6)MB AQ12\*A(B)ME  
AQ12\*5(6)ME AQ09\*5(6)MED  
AQ09\*5(6)ME AQ07\*5(6)MED  
SH09Z\*5(6) SH12Z\*A(B)  
AQ07\*5(6)ME SH09Z\*5(6)D  
SH07Z\*5(6) SH07Z\*5(6)D  
AQ09\*7(8)ME  
SH09Z\*7(8)  
AQ07\*7(8)ME  
SH07Z\*7(8)  
AQ12\*9(0)ME  
SH12Z\*9(0)

## OUTDOOR UNIT

UQ12\*5(6)MB UQ12\*A(B)ME  
UQ12\*5(6)ME UQ09\*5(6)MED  
UQ09\*5(6)ME UQ07\*5(6)MED  
SH09Z\*5(6)X SH12Z\*A(B)X  
UQ07\*5(6)ME SH09Z\*5(6)DX  
SH07Z\*5(6)X SH07Z\*5(6)DX  
UQ09\*7(8)ME  
SH09Z\*7(8)X  
UQ07\*7(8)ME  
SH07Z\*7(8)X  
UQ12\*9(0)ME  
SH12Z\*9(0)X

# SERVICE *Manual*

## AIR CONDITIONER

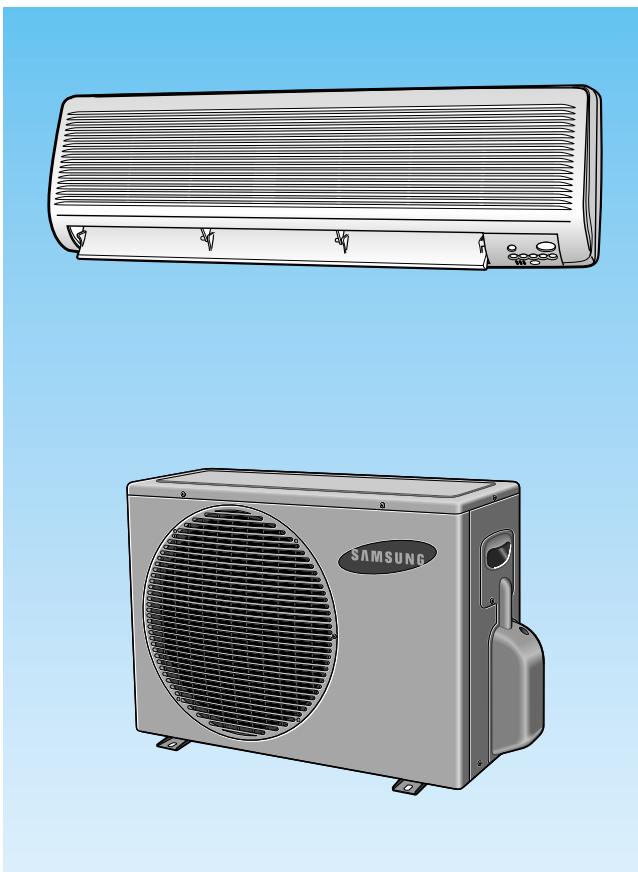

## CONTENTS

1. Precautions
2. Product Specifications
3. Operating Instructions and Installation
4. Disassembly and Reassembly
5. Troubleshooting
6. Exploded Views and Parts List
7. Block Diagrams
8. PCB Diagrams
9. Wiring Diagrams
10. Schematic Diagrams