



ROOM AIR CONDITIONER

INDOOR UNIT



SH07ZA1(2)(3)(4)
SH09ZA1(2)(3)(4)
SH12ZA1(2)(3)(4)
AQ07A1(2)(3)(4)ME
AQ09A1(2)(3)(4)ME
AQ12A1(2)(3)(4)ME
SH07ZA1(2)(3)(4)A
SH09ZA1(2)(3)(4)A
SH12ZA1(2)(3)(4)A
AQ09A1(2)(3)(4)MD
AQ12A1(2)(3)(4)MD

OUTDOOR UNIT

SH07ZA1(2)(3)(4)X
SH09ZA1(2)(3)(4)X
SH12ZA1(2)(3)(4)X
UQ07A1(2)(3)(4)ME
UQ09A1(2)(3)(4)ME
UQ12A1(2)(3)(4)ME
SH07ZA1(2)(3)(4)X
SH09ZA1(2)(3)(4)X
SH12ZA1(2)(3)(4)XA
UQ09A1(2)(3)(4)MD
UQ12A1(2)(3)(4)MD

SERVICE Manual

AIR CONDITIONER

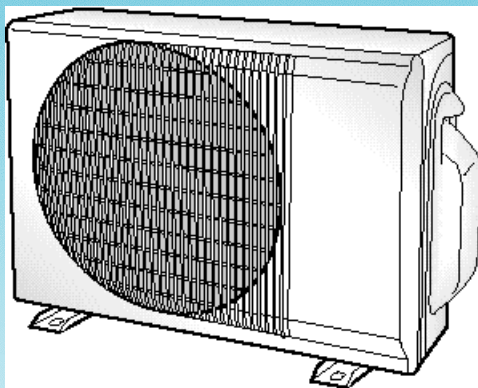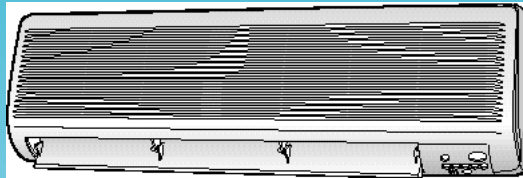

CONTENTS

1. Precautions
2. Product Specifications
3. Operating Instructions and Installation
4. Disassembly and Reassembly
5. Troubleshooting
6. Exploded Views and Parts List
7. Block Diagrams
8. PCB Diagrams
9. Wiring Diagrams
10. Schematic Diagrams

