




5. Set Up the Model Option

5-1 Setting Option Setup Method


ex) Option No. : 067024-17A362

 
 
Step 1 : Enter the Option Setup mode.

 

 
 


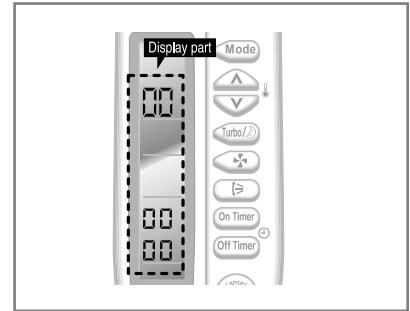


 
 

 
 
 


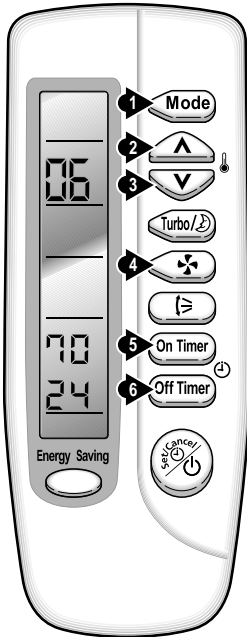




 
 

 
 
 




 

 
 
 
 
 
 
 







 
 

 

 
 

 




 
 

 

 
 
 

- 1st Take out the batteries of remote control.
- 2nd Press the temperature  button simultaneously and insert the battery again.
- 3rd Make sure the remote display shown as .




Step 2 : Enter the Option Setup mode and select your option according to the following procedure.



* Setting is not required if you must  a value which has a  default.

- 1 The default value is  .
Otherwise, push the  button to  .
Every time you push the button, the display panel reads  or  repeatedly.
- 2 Push the  button to set the display panel to  .
Every time you push the button, the display panel reads  →  →  →  → ... →  →  →  →  →  →  →  repeatedly.
- 3 Push the  button to set the display panel to  .
Every time you push the button, the display panel reads  →  →  →  → ... →  →  →  →  →  →  →  repeatedly.
- 4 Push the  button to set the display panel to  .
Every time you push the button, the display panel reads  →  →  →  → ... →  →  →  →  →  →  →  repeatedly.
- 5 Push the  button to set the display panel to  .
Every time you push the button, the display panel reads  →  →  →  → ... →  →  →  →  →  →  →  repeatedly.
- 6 Push the  button to set the display panel to  .
Every time you push the button, the display panel reads  →  →  →  → ... →  →  →  →  →  →  →  repeatedly.

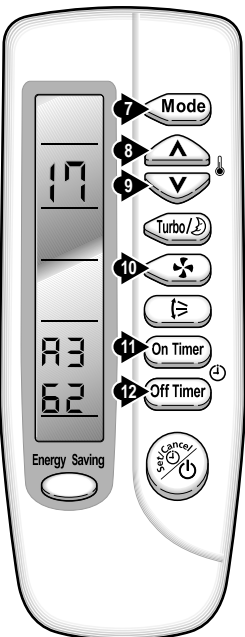

* Setting is not required if you must \square a value which has a \square default.

7 Press Mode button, then the default value is $\begin{matrix} 10 \\ 00 \\ 00 \end{matrix}$.

8 Push the \uparrow button to set the display panel to \square .
Every time you push the button, the display panel reads $\square \rightarrow ! \rightarrow \text{2} \rightarrow \text{3} \rightarrow \dots \rightarrow \text{9} \rightarrow \text{A} \rightarrow \text{b} \rightarrow \text{c} \rightarrow \text{d} \rightarrow \text{E} \rightarrow \text{F}$ repeatedly.

9 Push the \downarrow button to set the display panel to R .
Every time you push the button, the display panel reads $\square \rightarrow ! \rightarrow \text{2} \rightarrow \text{3} \rightarrow \dots \rightarrow \text{9} \rightarrow \text{A} \rightarrow \text{b} \rightarrow \text{c} \rightarrow \text{d} \rightarrow \text{E} \rightarrow \text{F}$ repeatedly.

10 Push the Turbo/2 button to set the display panel to 3 .
Every time you push the button, the display panel reads $\square \rightarrow ! \rightarrow \text{2} \rightarrow \text{3} \rightarrow \dots \rightarrow \text{9} \rightarrow \text{A} \rightarrow \text{b} \rightarrow \text{c} \rightarrow \text{d} \rightarrow \text{E} \rightarrow \text{F}$ repeatedly.

11 Push the On Timer button to set the display panel to E .
Every time you push the button, the display panel reads $\square \rightarrow ! \rightarrow \text{2} \rightarrow \text{3} \rightarrow \dots \rightarrow \text{9} \rightarrow \text{A} \rightarrow \text{b} \rightarrow \text{c} \rightarrow \text{d} \rightarrow \text{E} \rightarrow \text{F}$ repeatedly.

12 Push the Off Timer button to set the display panel to 2 .
Every time you push the button, the display panel reads $\square \rightarrow ! \rightarrow \text{2} \rightarrow \text{3} \rightarrow \dots \rightarrow \text{9} \rightarrow \text{A} \rightarrow \text{b} \rightarrow \text{c} \rightarrow \text{d} \rightarrow \text{E} \rightarrow \text{F}$ repeatedly.

Step 3 : Upon completion of the selection, check you made right selections.

Press the Mode Selection key, Mode to set the display part to \square and check the display part.

→ The display part shows $\begin{matrix} 05 \\ 10 \\ 24 \end{matrix}$.

Press the Mode Selection key, Mode to set the display part to $!$ and check the display part.

→ The display part shows $\begin{matrix} ! 1 \\ \text{R3} \\ \text{62} \end{matrix}$.

Step 4 : Pressing the ON/OFF button (ON/OFF)

When pressing the operation ON/OFF key with the direction of remote controller for unit, the sound "Ding" or "Diring" is heard and the OPERATION ICON(ON/OFF) lamp of the display is flickering at the same time, then the input of option is completed. (If the diring sound isn't heard, try again pressing the ON/OFF button.)

Step 5 : Unit operation test-run

First, Remove the battery from the remote controller.

Second, Re-insert the battery into the remote controller.

Third, Press ON/OFF key with the direction of remote controller for set.

• Error Mode

1st If all lamps of indoor unit are flickering, Plug out, plug in battery again and press ON/OFF key to retry.

2nd If the unit is not working properly or all lamps are continuously flickering after setting the option code, see if the correct option code is set up for its model.

■ OPTION ITEMS

REMOCON MODEL	SEG1	SEG2	SEG3	SEG4	SEG5	SEG6	SEG7	SEG8	SEG9	SEG10	SEG11	SEG12
	SH07ZS2 SH07ZS2A AQ07S2GE	0	2	4	5	6	7	1	7	A	2	0
SH09ZS2	0	2	5	2	6	6	1	7	A	2	3	F
SH09ZS2A AQ09S2GE	0	2	5	3	6	5	1	7	A	2	3	F
SH12ZS4	0	6	6	0	6	5	1	7	A	3	5	1
SH12ZS4A AQ12S4GE	0	6	7	0	6	6	1	7	A	3	5	1
AQT12S4GB AQT12S4GE	0	6	7	0	E	6	1	7	A	3	5	1