



ROOM AIR CONDITIONER

INDOOR UNIT

AD18B1(B2)E09

AD19B1(B2)E07

AD19B1(B2)E12

AD24B1(B2)E12

AD26B1(B2)E07

AD26B1(B2)E12

MH18ZA1(A2)-09

MH19ZA1(A2)-07

MH19ZA1(A2)-12

MH24ZA1(A2)-12

MH26ZA1(A2)-07

MH26ZA1(A2)-12

OUTDOOR UNIT

UD18B1(B2)E2

UD19B1(B2)E2

UD24B1E2

UD26B1E3

MH18ZA1(A2)X



MH19ZA1(A2)X

MH24ZA1(A2)X

MH26ZA1(A2)X

SERVICE *Manual*

AIR CONDITIONER

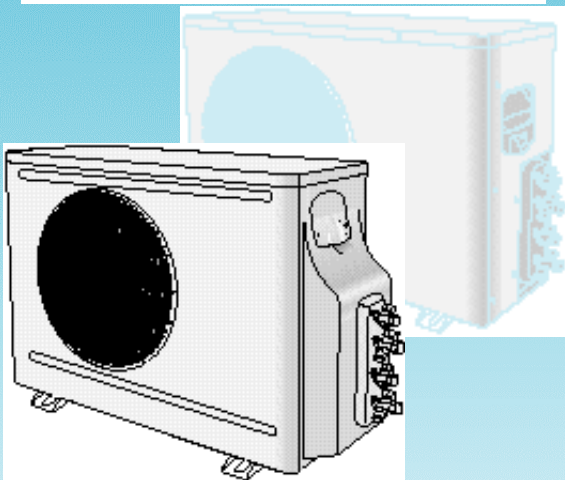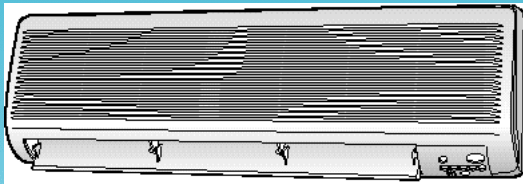

CONTENTS

1. Precautions
2. Product Specifications
3. Operating Instructions and
Technical Document
4. Disassembly and Reassembly
5. Troubleshooting
6. Exploded Views and Parts List
7. PCB Diagrams
8. Wiring Diagrams
9. Schematic Diagrams

