





ROOM AIR CONDITIONER

INDOOR UNIT
AQ07A1VE
AQ09A1VE/B
AQ12A1VE/B

OUTDOOR UNIT
UQ07A1VE
UQ09A1VE/B
UQ12A1VE/B

SERVICE Manual

AIR CONDITIONER

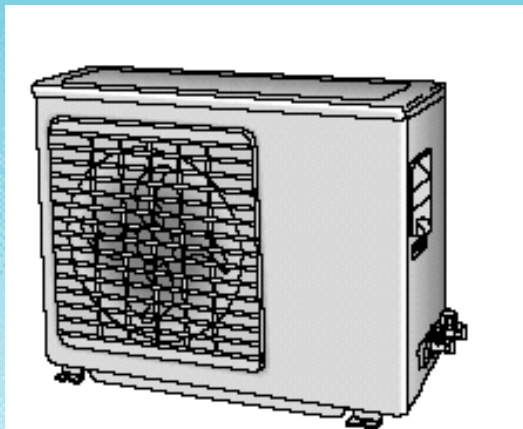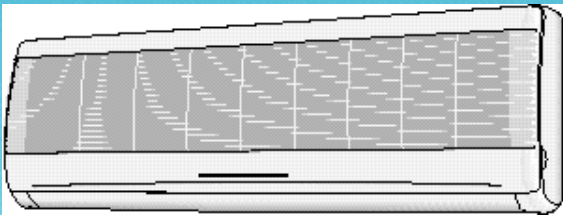

CONTENTS

1. Precautions
2. Product Specifications
3. Operating Instructions and Installation
4. Disassembly and Reassembly
5. Troubleshooting
6. Exploded Views and Parts List
7. Block Diagrams
8. PCB Diagrams
9. Wiring Diagrams
10. Schematic Diagrams

