


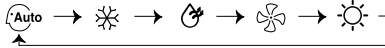












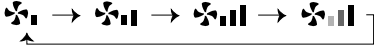






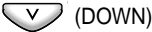


2. Operating Instructions

2-1 The Feature of Key in remote control

No	NAMED OF KEY	FUNCTION OF KEY
1		On/Off & Timer Set/Cancel button. Press the  button to stop and run the air conditioner or On/Off timer set up.
2		Mode selection button. Each time you press this button, Mode is changed in the following order. 
		 : Auto Mode  : Fan Only  : Cool Mode  : Heat Mode  : Dry Mode
3	 (UP)	Temperature adjustment button(UP). To increase the temperature by the pressing the temperature button.
	 (DOWN)	Temperature adjustment button(DOWN). To decrease the temperature by the pressing the temperature button.
4		Turbo/Sleep mode selection button. Press the  button one or more times until TURBO appears. The air conditioner cools or heats the room as quickly as possible. After 30minutes, the air conditioner is reset automatically to the previous mode.
		Turbo/Sleep mode selection button. Press the  button one or more times until  appears. The sleep timer can be used when you are cooling or heating your room to switch the air conditioner off automatically after a period of six hours.
5		Fan speed adjustment button. Each time you press this button, FAN SPEED is changed in the following order. 
6		Swing button. It adjusts the airflow to upward and downward.
7		On Timer button. The On Timer enables you to switch on the air conditioner automatically after a given period of time that is from 30 minutes to 24 hours. To cancel, press the  (Set/Cancel) button.
8		Off Timer button. The Off Timer enables you to switch off the air conditioner automatically after a given period of time that is from 30 minutes to 24 hours. To cancel, press the  (Set/Cancel) button.
9	Energy Saving 	Energy Saving button. If you wish to save energy when using your air conditioner, select the Energy saving mode with the  button.

2-1-1 Name & Function of Key in remote control

1. AUTO MODE : In this mode, operation mode(COOL, HEAT) is selected automatically by the room temperature of initial operation.

Room Temp	Operation Type
$Tr \geq 21^{\circ}\text{C} + \Delta T$	Cool Operation (Set Temp: $24^{\circ}\text{C} + \Delta T$)
$21^{\circ}\text{C} + \Delta T > Tr$	Heat Operation (Set Temp: $22^{\circ}\text{C} + \Delta T$)

$\Delta T = -1^{\circ}\text{C}, -2^{\circ}\text{C}, 0^{\circ}\text{C}, +1^{\circ}\text{C}, +2^{\circ}\text{C}$
 ΔT is controlled by setting temperature up/down key of remote control

2. COOL MODE : The unit operates according to the difference between the setting and room temperature. ($18^{\circ}\text{C} \sim 30^{\circ}\text{C}$)
3. HEAT MODE : The unit operates according to the difference between the setting and room temperature. ($16^{\circ}\text{C} \sim 30^{\circ}\text{C}$)
 *Prevention against cold wind : In order to prevent the cool air from flowing out at the heat mode, the indoor fan does not operate or operates very slowly in the following cases. At this time, the indoor heat exchanger will be preheating.
 - For 3~5 minutes after the initial operation
 - For deicing operation
 - The operation of an indoor fan in accordance with the temperature of an indoor heat exchanger




The temperature of indoor heat exchanger	Indoor fan speed
below 28°C	off
$28^{\circ}\text{C} \sim$ below 34°C	LL Speed
$34^{\circ}\text{C} \sim$ below 40°C	L Speed
above 40°C	Setting Speed

*High temperature release function : It is a function to detect an outdoor overload by the sensor of an indoor heat exchanger and to turn the outdoor fan or the compressor ON/OFF for safety.
 *Deice : Deicing operation is controlled by indoor unit's heat exchanger temperature and accumulating time of compressor's operation.
 Deice ends by sensing of the processing time by deice condition.

4. DRY MODE : Has 3 states, each determined by room temperature.
 The unit operates in DRY mode.
 *Compressor ON/OFF Time is controlled compulsorily (can not set up the fan speed, always breeze).
 *Protective function : Low temperature release. (Prevention against freeze)
5. TURBO MODE : This mode is available in AUTO, COOL, HEAT, DRY, FAN MODE.
 When this button is pressed at first, the air conditioner is operated "powerful" state for 30 minutes regardless of the set temperature, room temperature.
 When this button is pressed again, or when the operating time is 30 minutes, turbo operation mode is canceled and returned to the previous mode.
 *But, if you press the TURBO button in DRY or FAN mode that is changed with AUTO mode automatically.
6. SLEEP MODE : Sleep mode is available only in COOL or HEAT mode.
 The operation will stop after 6 hours.
 *In COOL mode : The setting temperature is automatically raised by 1°C each 1hour When the temperature has been raised by total of 2°C , that temperature is maintained.
 *In HEAT mode : The setting temperature is automatically dropped by 1°C each 1hour.
 When the temperature has been dropped by total of 2°C , that temperature is maintained.
7. FAN SPEED : Manual (3 step), Auto (4 step)
 Fan speed automatically varies depending on both the difference between setting and the room temperature.
8. COMPULSORY OPERATION :
 For operating the air conditioner without the remote control.
 *The air conditioner starts up in the most suitable mode for the room temperature:

Room Temperature	Operating Mode	Temperature Setting
Less than 21°C	Heat	22°C approx.
21°C or above	Cool	24°C approx.

9. SWING : BLADE-H is rotated vertically by the stepping motor.




*Swing Set : Press the  button under the remote control is displayed on LCD the  and the blades move up and down. If the one more time press the  button, blades location is stop.

10. SETTING THE ON/OFF TIMER. :

*ON TIMER : The On Timer enables you to switch on the air conditioner automatically after a given period of time. You can set the period of time from 30 minutes to 24 hours.

*OFF TIMER : The Off Timer enables you to switch off the air conditioner automatically after a given period of time. You can set the period of time from 30 minutes to 24 hours.

11. SELF DIAGNOSIS

Description	LAMP or DISPLAY Monitor		
	OPERATION	TIMER	TURBO
			
Indoor unit room temperature sensor error(open or short)	○	◐	○
Indoor unit heat exchanger temperature sensor error(open or short)	◐	◐	○
Indoor fan motor malfunction	◐	○	◐
EEPROM error	○	◐	◐
Option error(option wasn't set up or option data error)	◐	◐	◐

○ : Lamp off ◐ : Lamp flickering

12. BUZZER SOUND : Whenever the On/Off button is pressed or whenever change occurs to the condition which is set up or select, the compulsory operation mode, buzzer is sounded "beep".

2-2 Installation

2-2-1 Selecting Area for Installation

Select an area for installation that is suitable to the customer's needs.

2-2-1(a) Indoor Unit

1. Make sure that you install the indoor unit in an area providing good ventilation. It must not be blocked by an obstacle affecting the airflow near the air inlet and the air outlet.
2. Make sure that you install the indoor unit in an area allowing good air handling and endurance of vibration of the indoor unit.
3. Make sure that you install the indoor unit in an area where there is no source of heat or vapor nearby.
4. Make sure that you install the indoor unit in an area from which hot or cool air is spread evenly in a room.
5. Make sure that you install the indoor unit in an area away from TVs, audio units, cordless phones, fluorescent lighting fixtures and other electrical appliances (at least 1 meter).
6. Make sure that you install the indoor unit in an area which provides easy pipe connection with the outdoor unit, and easy drainage for condensed water.
7. Make sure that you install the indoor unit in an area which is large enough to accommodate the measurements shown in figure on the next page.

2-2-1(b) Outdoor Unit

1. Make sure that you install the outdoor unit in area not exposed to the rain or direct sun light.
(Install a separate sunblind if exposed to direct sun light.)
2. Make sure that you install the outdoor unit in area allowing good air moment, not amplifying noise or vibration, especially to avoid disturbing neighbors.
(Fix the unit firmly if it is mounted in a high place.)

3. Make sure that you install the outdoor unit in area providing good ventilation and which is not dusty. It must not be blocked by any obstacle affecting the airflow near the air inlet and the air outlet.
 4. Make sure that you install the outdoor unit in area free from animals or plants.
 5. Make sure that you install the outdoor unit in area not blocking the traffic.
 6. Make sure that you install the outdoor unit in area easy to drain condensed water from the indoor unit.
 7. Make sure that you install the outdoor unit in area which provides easy connection within the maximum allowable length of a coolant pipe(18***:15meters, 24***:20meters).
- Note**

 1. Add (18***: 20g, 24***: 30g) of refrigerant (R22) for every 1 meter if the pipe length exceeds the standard pipe length of 5 meters.
 2. Maintain a height between the indoor and outdoor units of less than 8 meters.
8. Make sure that you install the outdoor unit in an area which is large enough to accommodate the measurements.

2-2-1(c) Remote Control Unit

1. Make sure that you install the remote control unit in an area free from obstacles such as curtains etc, which may block signals from the remote control unit.
2. Make sure that you install the remote control unit in an area not exposed to direct sunlight, and where there is no source of heat.
3. Make sure that you install the remote control unit in an area away from TVs, audio units, cordless phones, fluorescent lighting fixtures and other electrical appliances (at least 1 meter).



Caution

- It is harmful to the air conditioner if it is used in the following environments: greasy areas (including areas near machines), salty areas such as coast areas, areas where sulfuric gas is present such as hot spring areas. Contact your dealer for advice.