




3. Set Up the Model Option

3-1 Setting Option Setup Method







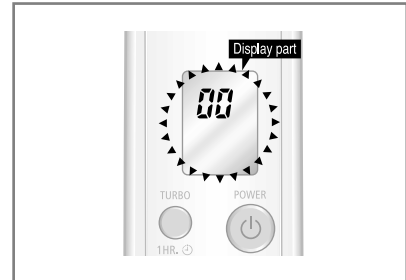




Option No. : 25 02 57 03 40 (SH12AWH)






 






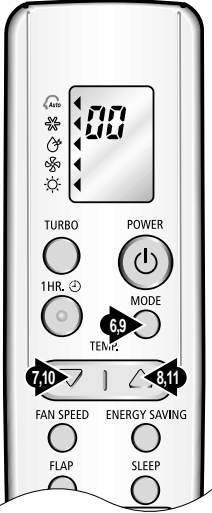






 

Step 1 : Enter the Option Setup mode.

- 1st Take out the batteries of remote control.
- 2nd Press the temperature  button simultaneously and insert the battery again.
- 3rd Make sure the remote display shown as  .




Step 2 : Enter the Option Setup mode and select your option according to the following procedure.

	Feature	Display
	<p>1 Setting Option SEG1. Push the  button to set the display panel to 2. Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.</p>	
	<p>2 Setting Option SEG2. Push the  button to set the display panel to 5. Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.</p>	
	<p>3 Change it into the set display of Option SEG3 and SEG4 with the  button.</p>	
	<p>4 Setting Option SEG3. Push the  button to set the display panel to 0. Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.</p>	
	<p>5 Setting Option SEG4. Push the  button to set the display panel to 2. Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.</p>	

	Feature	Display
	<p>6</p> <p>Change it into the set display of Option SEG5 and SEG6 with the  button.</p>	
	<p>7</p> <p>Setting Option SEG5. Push the  button to set the display panel to 5 . Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.</p>	
	<p>8</p> <p>Setting Option SEG6. Push the  button to set the display panel to 7 . Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.</p>	
	<p>9</p> <p>Change it into the set display of Option SEG7 and SEG8 with the  button.</p>	
	<p>10</p> <p>Setting Option SEG7. Push the  button to set the display panel to 0 . Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.</p>	
	<p>11</p> <p>Setting Option SEG8. Push the  button to set the display panel to 3 . Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.</p>	
	<p>12</p> <p>Change it into the set display of Option SEG9 and SEG10 with the  button.</p>	
	<p>13</p> <p>Setting Option SEG9. Push the  button to set the display panel to 4 . Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.</p>	
	<p>14</p> <p>Setting Option SEG10. Push the  button to set the display panel to 0 . Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.</p>	

Step 3 : Upon completion of the selection, check you made right selections.

Whenever you press the  button, the set Option will be displayed.




Step 4 : Pressing the ON/OFF button ()

When pressing the operation ON/OFF key with the direction of remote controller for unit, the sound "Ding" is heard and the OPERATION LED lamp is flickering at the same time, then the input of option is completed. (If the "ding" sound isn't heard, try again pressing the ON/OFF button.)

Step 5 : Unit operation test-run

First, Remove the battery from the remote controller.

Second, Re-insert the battery into the remote controller.

Third, Press ON/OFF () key with the direction of remote controller for set.

• Error Mode

- 1st If all lamps of indoor unit are flickering, Plug out, plug in battery again and press ON/OFF key to retry.
- 2nd If the unit is not working properly or all lamps are continuously flickering after setting the option code, see if the correct option code is set up for its model.

3-2 Table of the option Code

Model	Option Code									
	SEG1	SEG2	SEG3	SEG4	SEG5	SEG6	SEG7	SEG8	SEG9	SEG10
SH12AWH SH12ZWH AQ12WHWE KFR-35G / SWA	2	5	0	2	5	7	0	3	4	0
SH09AWH	2	5	0	2	5	7	0	0	c	8
SH09ZWH AQ09WHWE KFR-25G / SWA	2	5	0	2	5	7	0	0	F	b