


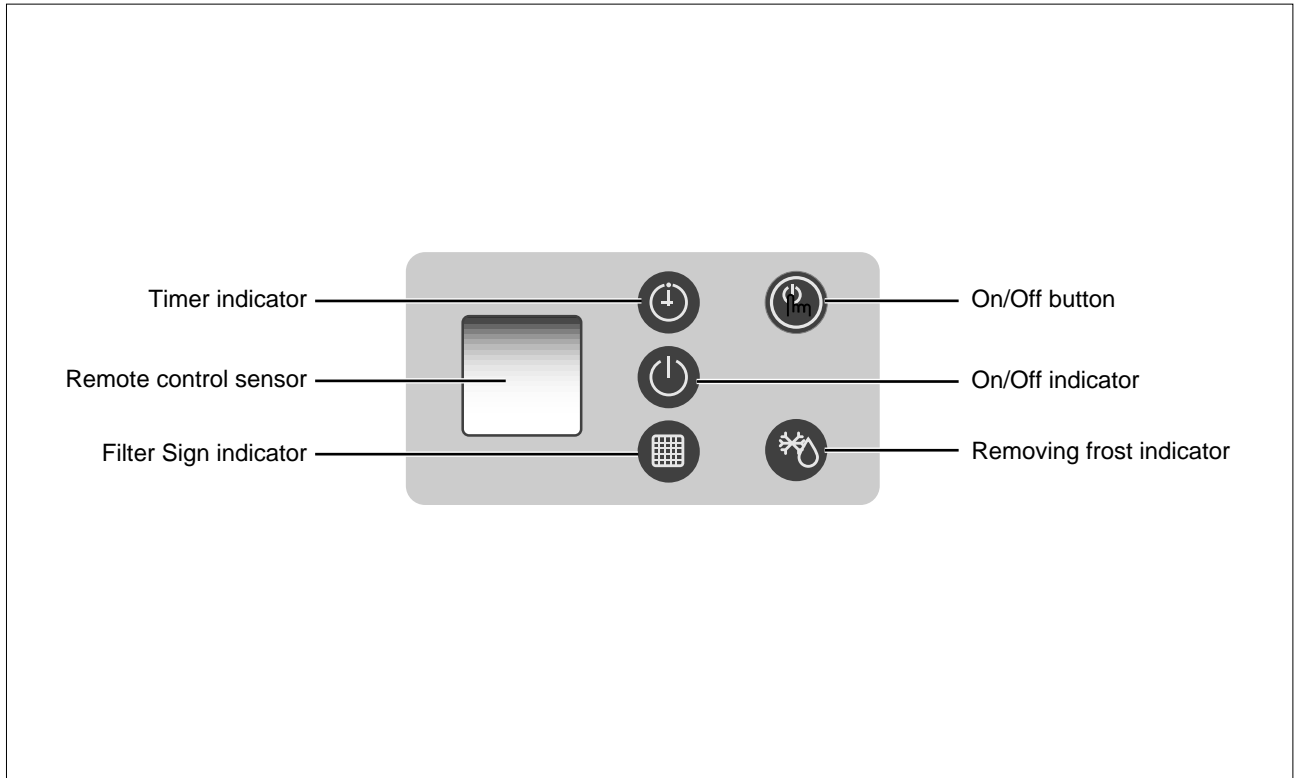



 
 
 









 

 




3. Operating Instructions

3-1 Display on Indoor unit





 







 





3-2 Name & Functions in Remote Control



3-2-1 Wired Remote Controller-Buttons


NO	NAMED OF KEY	FUNCTION OF KEY
1		Power On/Off button to start and stop airconditioner or timer set up
2	 (UP)	Temp. up button. To increase the temperature by the pressing the temperature button
	 (DOWN)	Temp. down button. To decrease the temperature by the pressing the temperature button
3		<p>Each time you press this button Mode is changed in the following order</p> <p> →  →  →  → </p> <p>  : Auto Mode  : Blowing  : Cooling Mode  : Heat Mode  : Dehumidifying Mode </p>
4		To complete the installation, checks and tests to ensure that the air conditioner is operating correctly.
		When the FILTER SIGN indicator appear on the remocon screen, cleaning the air conditioner filter. After that, press this button.
5		<p>Each time you press this button, FAN SPEED is changed in the following order.</p> <p> →  →  → </p>
6		Adjust air flow vertically.
7		The ON Timer enables you to switch on the air conditioner automatically after a given period of time that is from 30 minutes to 24 hours. To cancel the On Time, press the (Set/Cancel) button.
8		The Off Timer enables you to switch off the air conditioner automatically after a given period of time that is from 30 minutes to 24 hours. To cancel the On Time, press the (Set/Cancel) button.

3-2-2 Wireless Remote Controller


NO	NAMED OF KEY	FUNCTION OF KEY
1		Power On/Off button to start and stop airconditioner or timer set up
2	 (UP)	Temp. up button. To increase the temperatute by the pressing the temperature button
	 (DOWN)	Temp. down button. To decrease the temperature by the pressing the temperature button
3		Each time you press this button Mode is changed in the following order   : Auto Mode  : Blowing  : Cooling Mode  : Heat Mode  : Dehumidifying Mode
4		When the FILTER SIGN indicator appeared on the remoconscreen, cleaning the air conditioner filter. After that, press the this button.
5		Each time you press this button, FAN SPEED is changed in the following order. 
6		Adjust air flow vertically.
7		The ON Timer enables you to switch on the air conditioner automatically after a given period of time that is from 30 minutes to 24 hours. To cancel the On Time, press the (Set/Cancel) button.
8		The Off Timer enables you to switch off the air conditioner automatically after a given period of time that is from 30 minutes to 24 hours. To cancel the On Time, press the (Set/Cancel) button.

3-3 Control system diagram

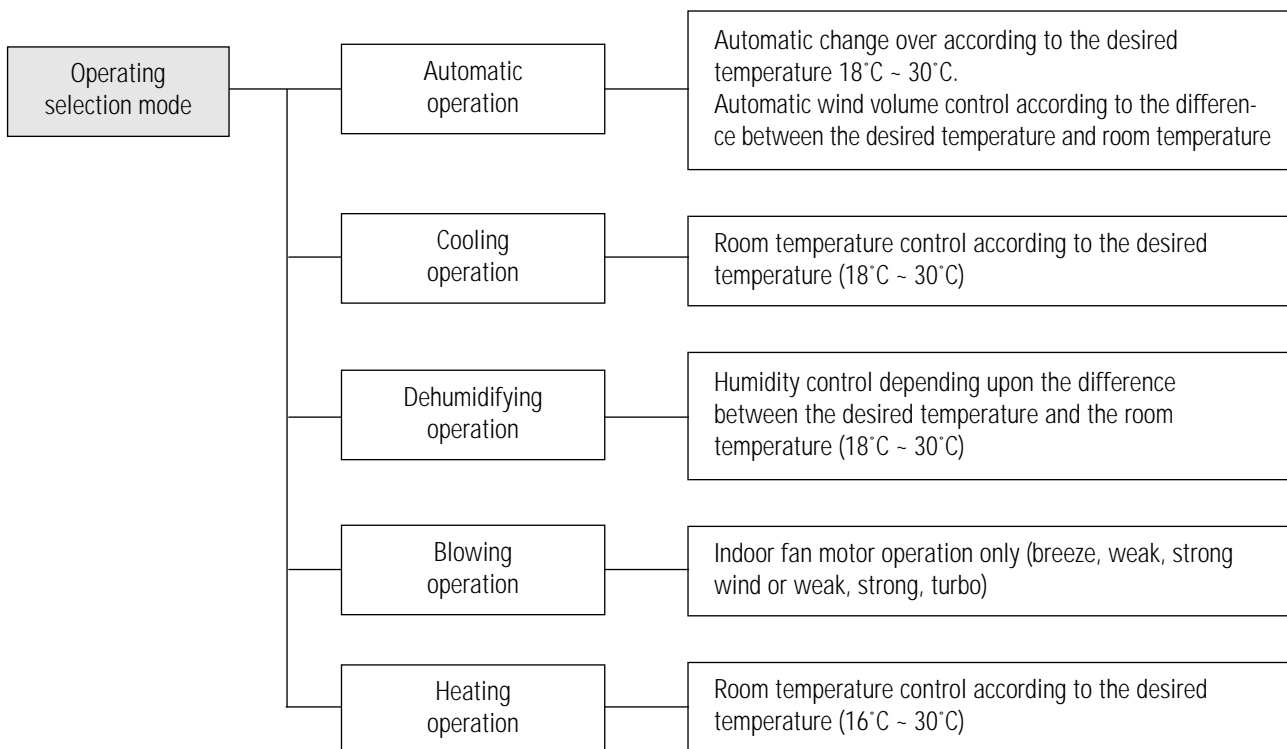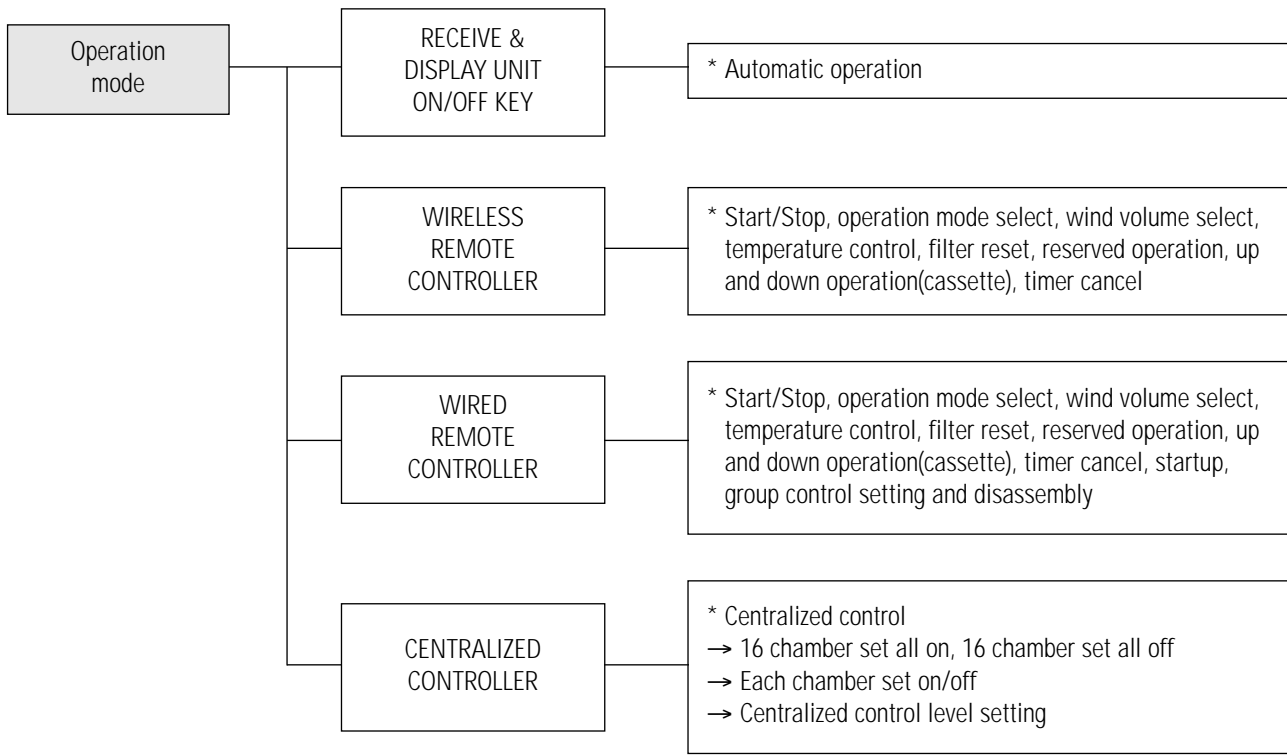


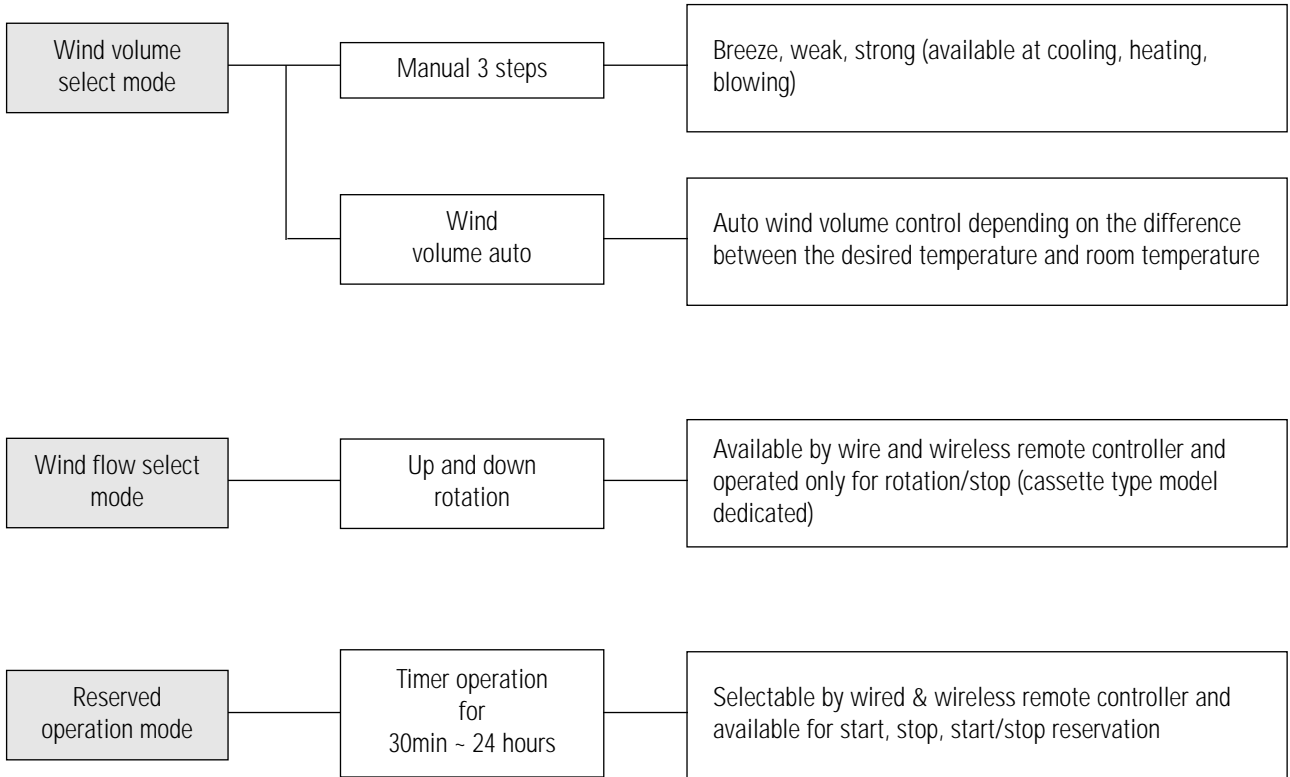

3-4 Micro Computer Block Diagram (Cassette) - Indoor

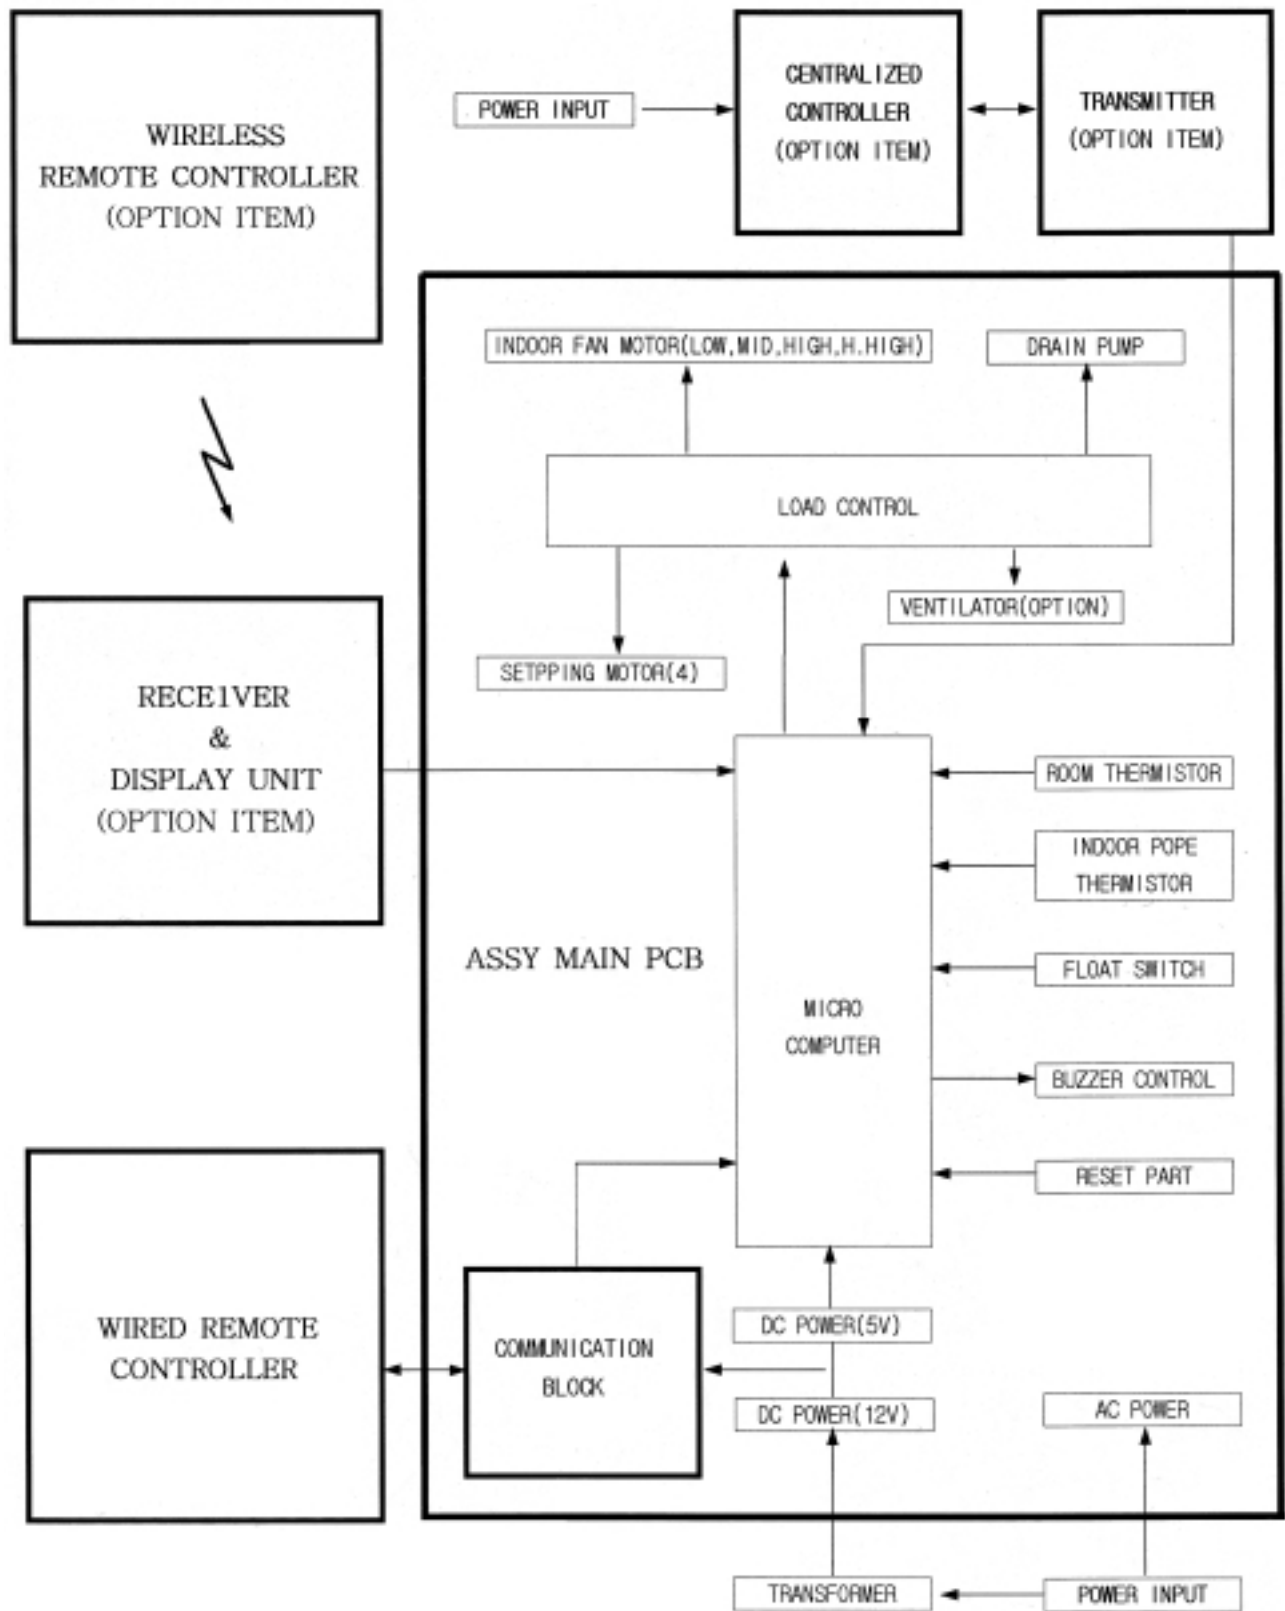

3-5 Micro Computer Block Diagram - Outdoor

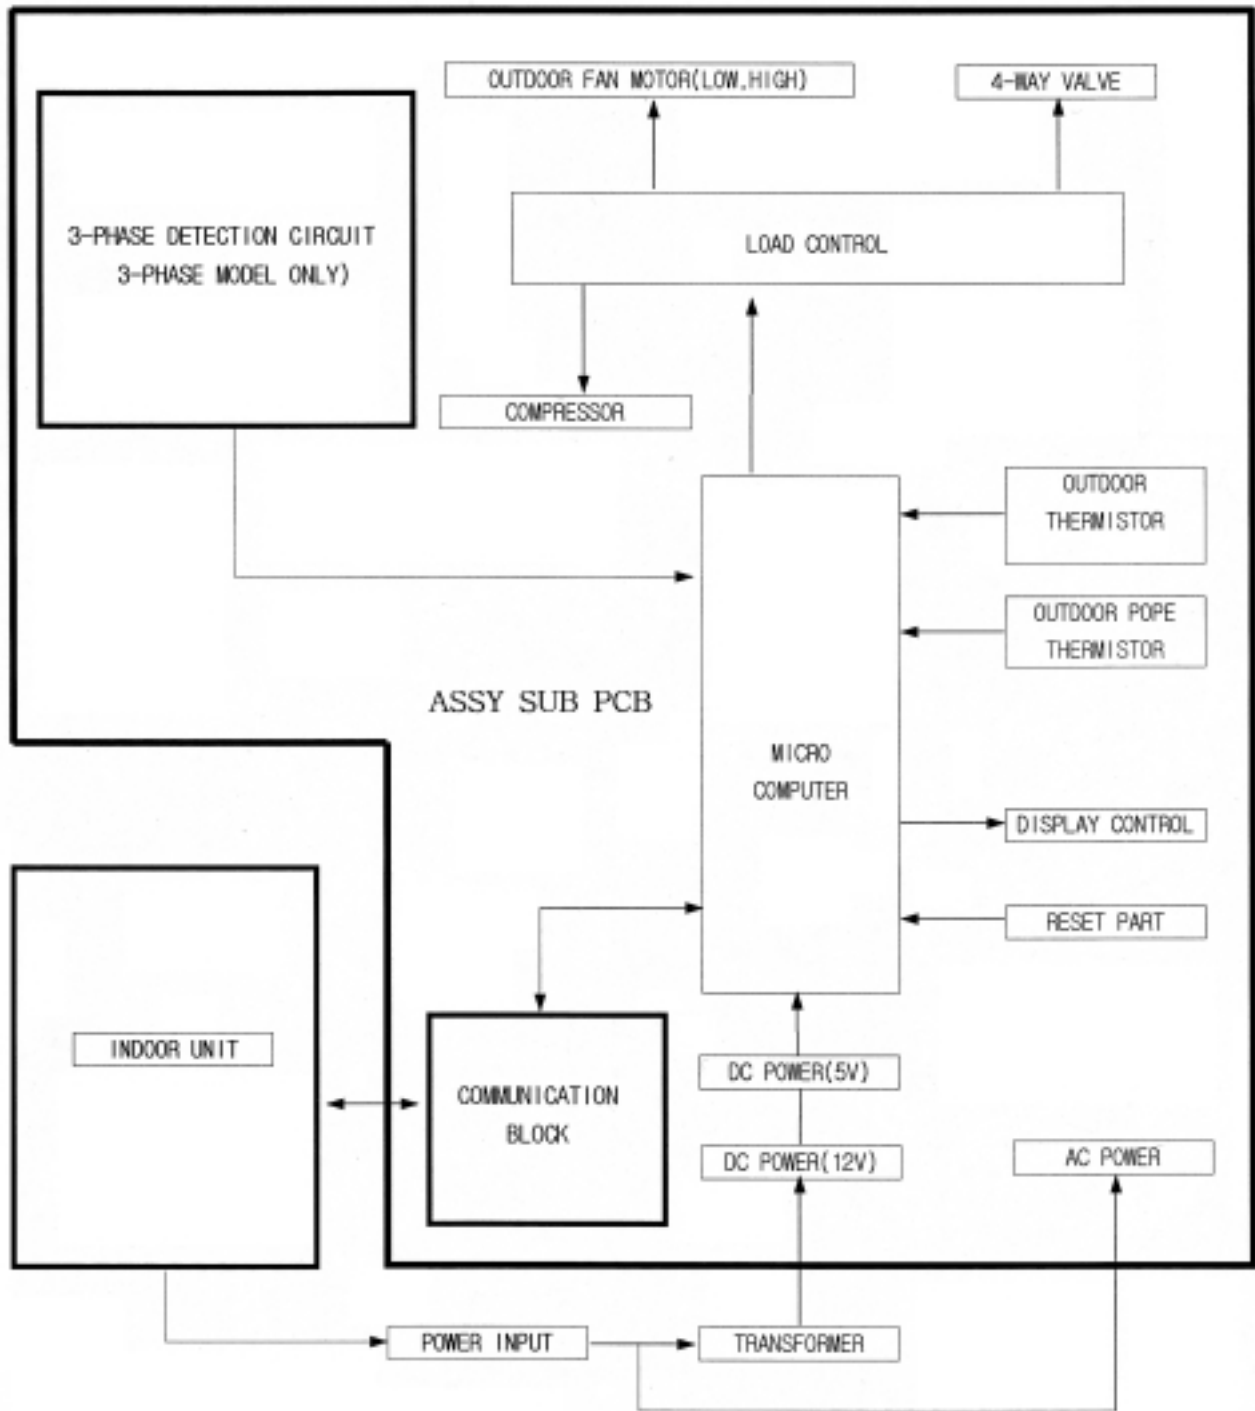

MEMO