




















3. Operating Instructions and Installation

3-1 Operating Instructions

3-1-1 Name & Function of Key in remote controller

NO	NAMED OF KEY	FUNCTION OF KEY
1		Power On/Off button to start and stop airconditioner or timer set up
2	 (UP)	Temp. up button. To increase the temperatute by the pressing the temperature button
	 (DOWN)	Temp. down button. To decrease the temperature by the pressing the temperature button
3		Each time you press this button Mode is changed in the following order   : Auto Mode  : Fan Only  : Cool Mode  : Dry Mode
4		Press  until the appearance. the air condition cools or heats the room as quickly as possible. after 30minutes, the air, the airconditioner is reset automatically to the previous mode
		Press  until the appearance. the sleep timer can be used when you are cooling or heating your room to switch the air conditioner off automatically after a perriod of six hours.
5		Each time you press this button, FAN SPEED is changed in the following order. 
6		Adjust air flow vertically.
7		The ON Timer enables you to switch on the air conditioner automatically after a given period of time that is from 30 minutes to 24 hours. To cancel the On Time, press the (Set/Cancel) button.
8		The Off Timer enables you to switch off the air conditioner automatically after a given period of time that is from 30 minutes to 24 hours. To cancel the On Time, press the (Set/Cancel) button.
9		To select the 5 way function with the remote control, press the 5 way button one or more times until the desired mode is selected.. Each time you press the 5 way button  Each 5 way indicator on the indoor unit comes on in or der.

3-1-1 Name & Function of Key in remote controller

1. **AUTO MODE** : In this mode, operation mode(COOL, HEAT) is selected automatically by the room temperature of initial operation.

Room Temp	Operation Type
Tr 21°C+ T	Cool Operation (Set Temp:AUTO SETTING)
21°C + T>Tr	Heat Operation (Set Temp : 22°C+ T)

T= -1°C, -2°C, 0°C+1°C+2°C

T is controlled by setting temperature up/down key of remote controller

2. **COOL MODE** : The unit operates according to the difference between the setting and room temperature. (18°C~30°C)
3. **HEAT MODE** : The unit operates according to the difference between the setting and room temperature.(16°C~30°C)
 - *Prevention against cold wind : For about 3~5 minutes after initial operation, thermo control or “de-ice”, the indoor fan will either not operate or operate very slowly, then switch to the selected fan speed. This period is to allow the indoor unit's heat-exchanger to prewarm before emitting warm air.
 - *High temperature release function : The outdoor unit for and compressor ON/OFF control for safety operation, when the over-heat is heat exchanger of indoor unit.
 - *De-ice : Deicing operation is controlled by indoor unit's heat exchanger temperature and accumulating time of compressor's operation.

De-ice end by sensing of the processing time by de-ice Condition.

4. **DRY MODE** : Has 3 states, each determined by room temperature.
The unit operates in DRY mode.
*Compressor ON/OFF Time is controlled compulsorily(can not set up the fan speed, always breeze).
*Protective function : Low temperature release. (Prevention against freeze)
5. **TURBO MODE** : This mode is available in AUTO, COOL, HEAT, DRY, FAN MODE.
When this button is pressed at first, the air conditioner is operated “powerful” state for 30 minutes regardless of the set temperature, room temperature.
When this button is pressed again, or when the operating time is 30 minutes, turbo operation mode is canceled and returned to the previous mode.
*But, if you press the TURBO button in DRY or FAN mode that is changed with AUTO mode automatically.
6. **SLEEP MODE** : Sleep mode is available only in COOL or HEAT mode.
The operation will stop after 6 hours.
*In COOL mode : The setting temperature is automatically raised by 1°C each 1hour
When the temperature has been raised by total of 2°C, that temperature is maintained.
*In HEAT mode : The setting temperature is automatically dropped by 1°C each 1hour.
When the temperature has been dropped by total of 2°C, that temperature is maintained.
7. **FAN SPEED** : Manual (3 step), Auto (4 step)
Fan speed automatically varies depending on both the difference between setting and the room temperature.


8. COMPULSORY OPERATION :


For operating the air conditioner without the remote controller.


*AUTO : The operating is the same function that AUTO MODE in the remote controller. And each time you press the button the 5WAY function is changed as follow.
 STD → NATURE → POWER → SAVING → SILENCE → POWER OFF


Each time you press This button, 5WAY function is changed in the following order
 STD(standard) → NATURE →


Quenching(High-speed) → Saving(Power-Saving) → Quite

* STD(standard) () : General operation Mode

* NATURE () : The unit is operated according to health pattern control

* POWER () : The unit is operated in powerful state



 
* SAVING () : The unit is operated in power saving state

* SILENCE () : The unit is operated quietly

Each mode has Auto, Cool and SLEEP operation designed in advance.

9. SWING : BLADE-H is rotated vertically by the stepping motor.

*Memory louver : When ON/OFF button is pressed at stop state, the BLADE-H returns to its original location which is operating state before stop

*Swing Set : Press the  button under the remote control is displayed on LCD the  and the blades move up and down. If the one more time press the  button, blades location is stop.







10. 24-Hour ON/OFF Real Setting Timer. : The air conditioner is turned ON at a specified time using 

OFF TIMER : The air Conditioner is turned OFF at a specified time using 

*ON TIMER : Only timer LED lights on.

*OFF TIMER : Both timer and operation LED lights on.

11. SELF Diagnosis

Check Point	LED DISPLAY					
	TIMER	STD	NATURE	POWER	SAVING	SILENCE
						
Indoor unit room temperature sensor error(open or short)	■	○	○	○	○	○
Indoor unit heat exchanger temperature sensor error(open or short)	■	■	○	○	○	○
Indoor fan mal function	○	○	■	○	○	○
EEPROM error	■	■	■	○	○	○
Option error(option wasn't set up or option data error)	■	■	■	■	■	■

■ : LED blinking ○ : LED off

12. BUZZER SOUND : Whenever the ON/OFF button is pressed or whenever change occurs to the condition which is set up or select, the compulsory operation mode, buzzer is sounded "beep"

3-2 Technical Document



3-2-1(a) AD24B1(B2)E12/MH24ZA1(A2)-12 / AD19B1(B2)E12/MH19ZA1(A2)-12/ AD26B1(B2)E12/ MH26ZA1(A2)-12

•Cooling Characteristics - Outdoor Temperature

Test Condition Indoor Unit (DB/WB) : 27/19

Voltage/Frequency : 240V/50Hz

•In case of 2Unit, Capacity & Current multiplied by 2

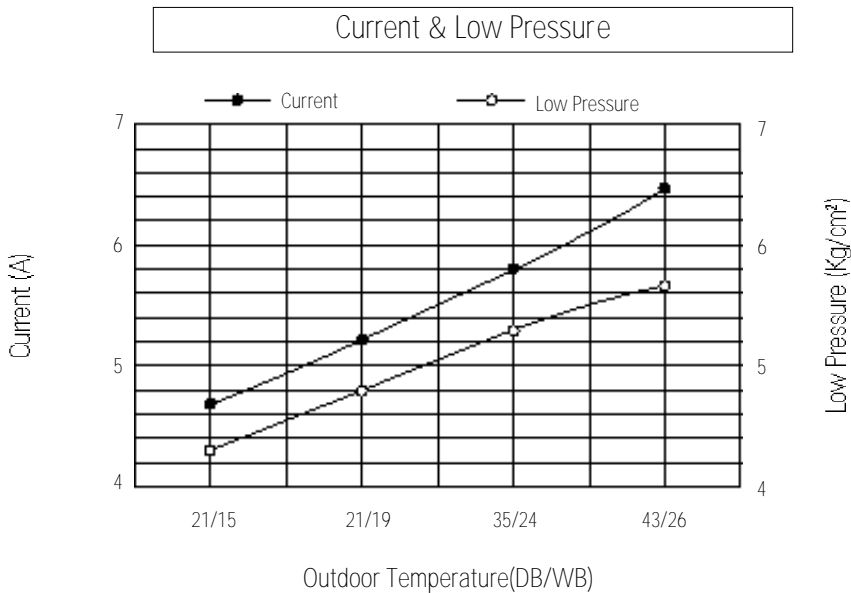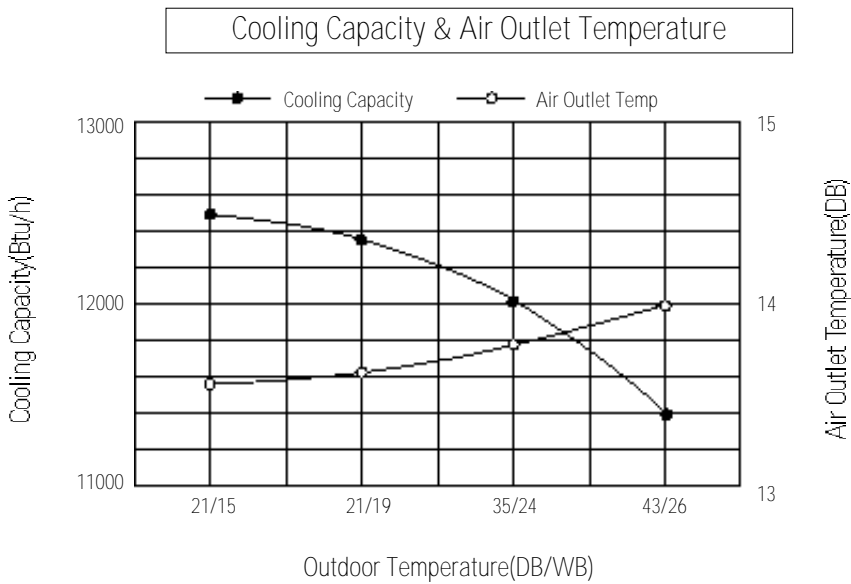


•Heating Characteristics - Outdoor Temperature

Test Condition Indoor Unit (DB/WB) : 20/15


Voltage/Frequency : 240V/50Hz

•In case of 2Unit, Capacity & Current multiplied by 2

Heating Capacity & Air Outlet Temperature

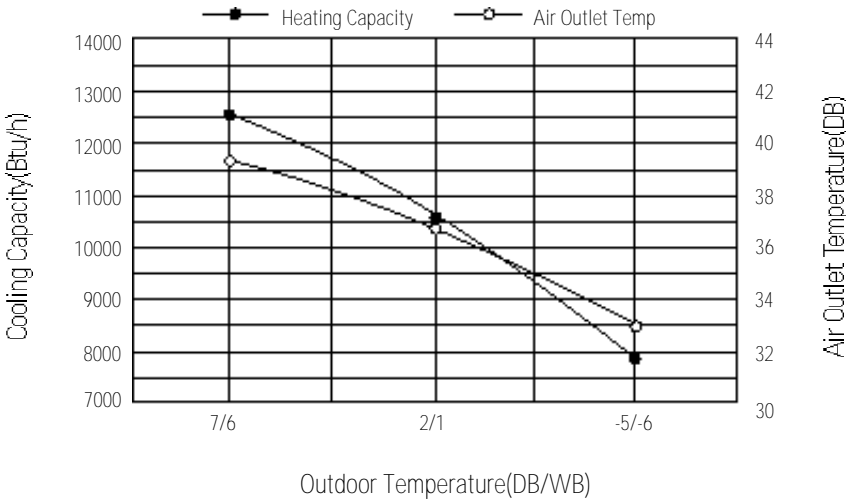

Current & Low Pressure


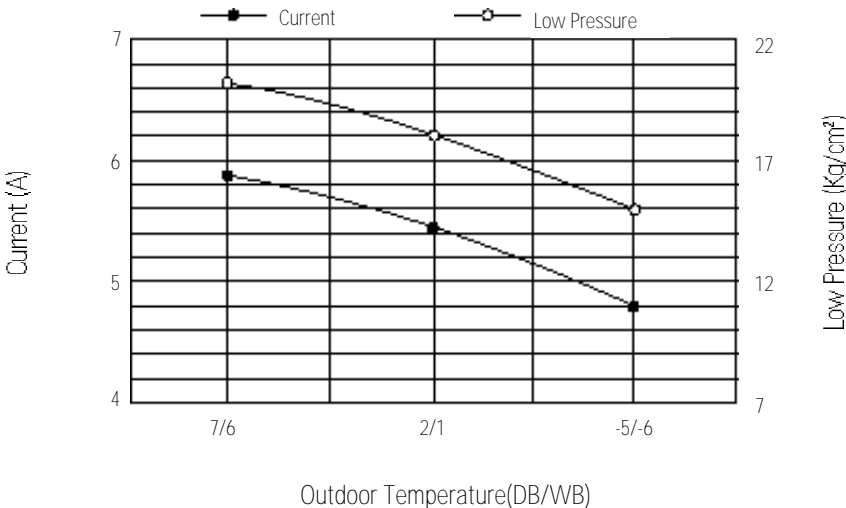


3-2-1(b) AD18B1(B2)E09/MH18ZA1(A2)-09 / AD19B1(B2)E07/MH19ZA1(A2)-07/ AD26B1(B2)E07/ MH26ZA1(A2)-07

• **Cooling Characteristics - Outdoor Temperature**

Test Condition Indoor Unit(DB/WB) : 27/19



Voltage/Frequency : 240V/50Hz

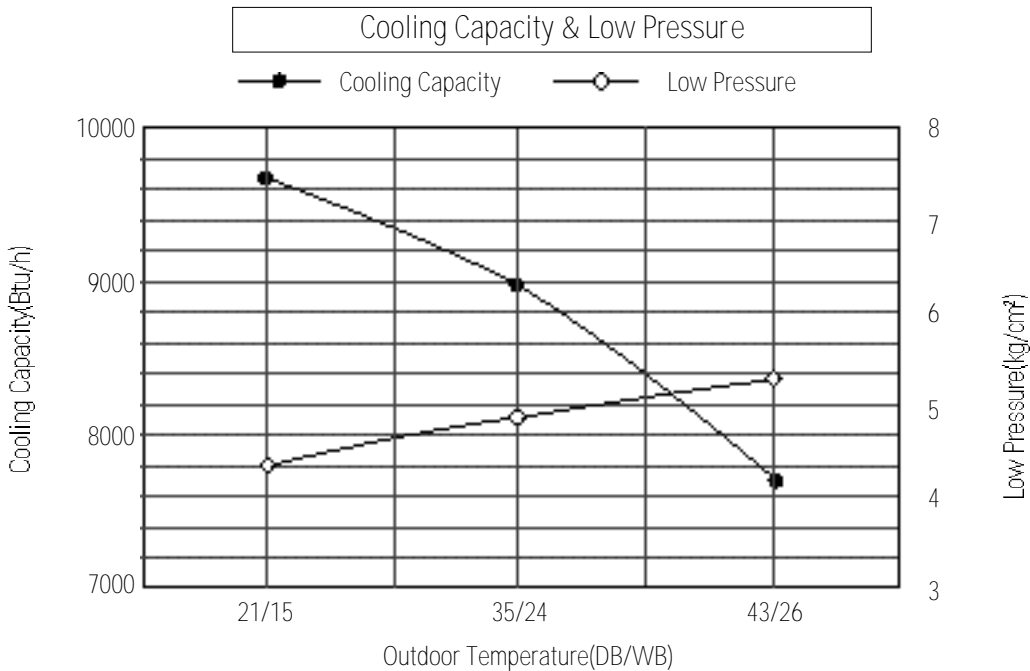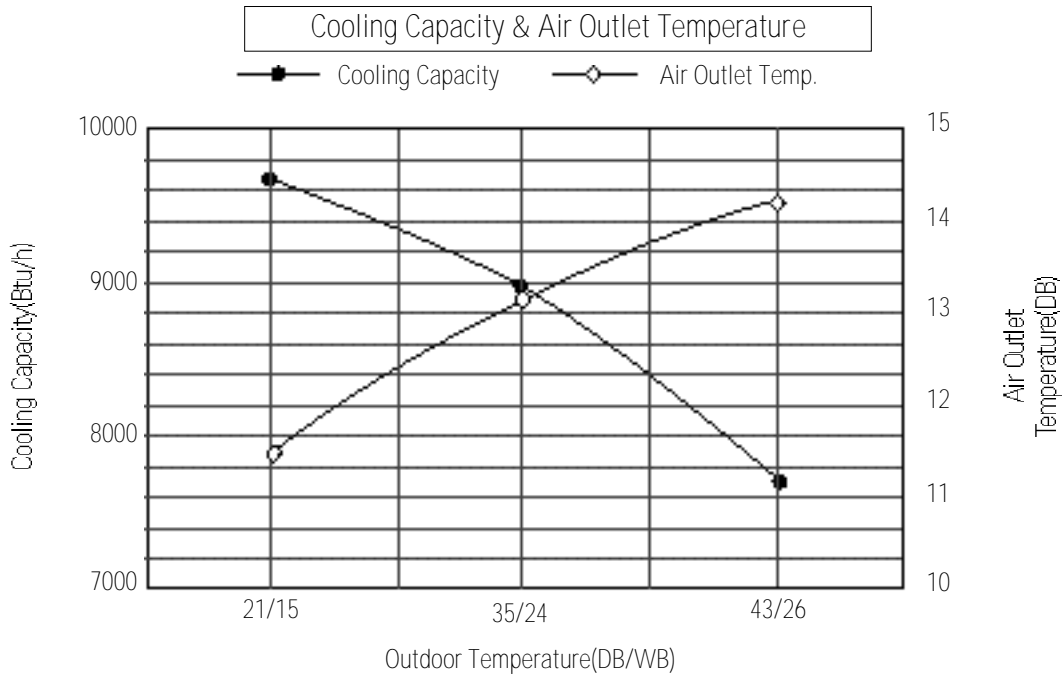

• Heating Characteristics - Outdoor Temperature (B or C Indoor Unit Only)

Test Condition Indoor Unit(DB/WB) : 20/15

Voltage/Frequency : 240V/50Hz

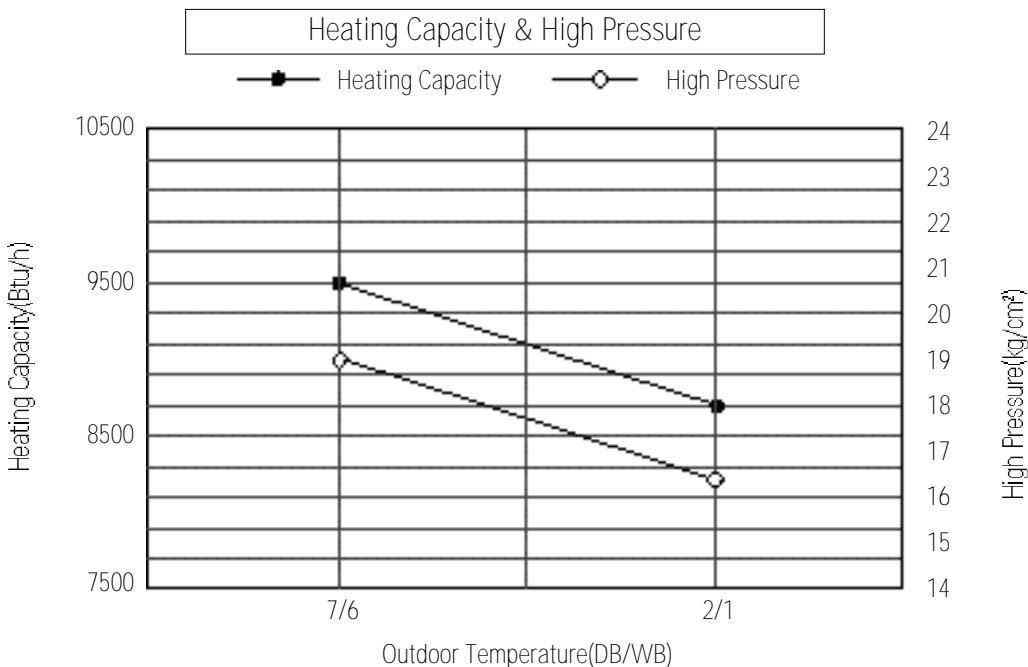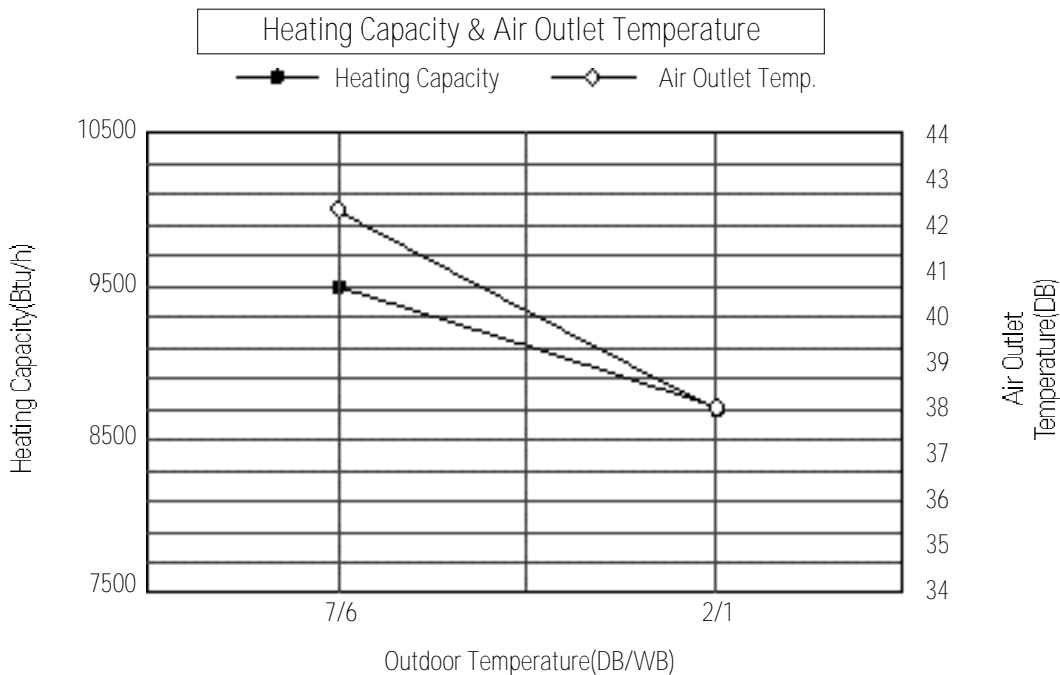

MEMO