




# INSTALLATION MANUAL

## R-410A Split series

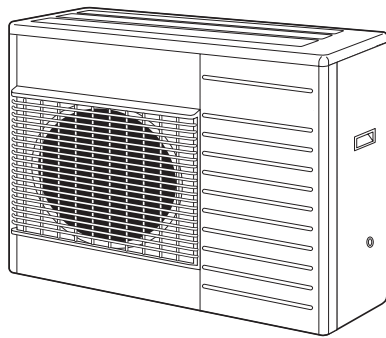

**MODELS**  
**4MX80AZVMB 4MK90AZVMB**

Installation manual  
R-410A Split series

English

Installationsanleitung  
Split-Baureihe R-410A

Deutsch

Manuel d'installation  
Série split R-410A

Français

Montagehandleiding  
R-410A Split-systeem

Nederlands

Manual de instalación  
Serie Split R-410A

Español

Manuale d'installazione  
Serie Multiambienti R-410A

Italiano

Εγχειρίδιο εγκατάστασης  
διαιρούμενης σειράς R-410A

Ελληνικά

Manual de Instalação  
Série split R-410A

Portugues

Руководство по монтажу  
Серия R-410A с раздельной установкой

Russian

DAIKIN INDUSTRIES, LTD.

declares under its sole responsibility that the air conditioning models to which this declaration relates:  
erklärt auf seine alleinige Verantwortung daß die Modelle der Klimageräte für die diese Erklärung bestimmt ist:  
déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration:

verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft:  
declara baja su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración:  
dichiara sotto sua responsabilità che i condizionatori modello a cui è riferita questa dichiarazione:

δηλώνει με αποκλειστική της ευθύνη ότι τα μοντέλα των κλιματιστικών συσκευών στα οποία αναφέρεται η παρούσα δήλωση:  
declara sob sua exclusiva responsabilidade que os modelos de ar condicionado a que esta declaração se refere:  
erklærer under eansvar, at klimateknologierne, som denne deklaration vedrører:

deklarerer i egenskap av huvudansvarig, att luftkonditioneringsmodellerna som berörs av denna deklaration innebär att:  
erklærer et fullstendig ansvar for at de luftkonditioneringsmodeller som berøres av denne deklarasjon innebærer at:  
ilmoittaa yksinomaan omalla vastuullaan, että tämän ilmoituksen tarkoitamat ilmastointilaitteiden mallit:

**4MK58AZVMB, 4MK75AZVMB, 3MX52AZVMB, 4MX68AZVMB,  
4MK90AZVMB, 4MX80AZVMB**

are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:  
der/den folgenden Norm(en) oder einem anderen Normdokument oder -dokumenten entspricht/entsprechen, unter der Voraussetzung, daß sie gemäß unseren Anweisungen eingesetzt werden:  
sont conformes à la/aux norme(s) ou autre(s) document(s) normatif(s), pour autant qu'ils soient utilisés conformément à nos instructions:

conform de volgende norm(en) of één of meer andere bindende documenten zijn, op voorwaarde dat ze worden gebruikt overeenkomstig onze instructies:  
están en conformidad con la(s) siguiente(s) norma(s) u otro(s) documento(s) normativo(s), siempre que sean utilizados de acuerdo con nuestras instrucciones:  
sono conformi al(i) seguente(i) standard(s) o altro(i) documento(i) a carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni:

είναι σύμφωνα με το(α) ακόλουθο(α) πρότυπο(α) ή άλλο έγγραφο(α) κανονισμών, υπό την προϋπόθεση ότι χρησιμοποιούνται σύμφωνα με τις οδηγίες μας:  
estão em conformidade com a(s) seguinte(s) norma(s) ou outro(s) documento(s) normativo(s), desde que estes sejam utilizados de acordo com as nossas instruções:  
overholder følgende standard(er) eller andet/andre retningsgivende dokument(er), forudsat at disse anvendes i henhold til vore instrukser:

respektive utrustning är utförd i överensstämmelse med och följer följande standard(er) eller andra normgivande dokument, under förutsättning att användning sker i överensstämmelse med våra instruktioner:  
respektive utstyr er i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forutsetning av at disse brukes i henhold til våre instrukser:  
vastavaat seuraavien standardien ja muiden ohjeellisten dokumenttien vaatimuksia edellyttäen, että niitä käytetään ohjeidemme mukaisesti:

**EN60335-2-40,**

following the provisions of:  
gemäß den Vorschriften der:  
conformément aux stipulations des:

overeenkomstig de bepalingen van:  
siguiendo las disposiciones de:  
secondo le prescrizioni per:

με τήρηση των διατάξεων των:  
de acordo com o previsto em:  
under iagtagelse af bestemmelserne i:

enligt villkoren i:  
gitt i henhold til bestemmelsene i:  
noudattaen määräyksiä:

Low Voltage 73/23/EEC  
Machinery Safety 98/37/EEC  
Electromagnetic Compatibility 89/336/EEC\*

Directives, as amended.  
Direktiven, gemäß Änderung.  
Directives, telles que modifiées.


Richtlijnen, zoals geamendeerd.  
Directivas, según lo enmendado.  
Direttive, come da modifica.

Οδηγιών, όπως έχουν τροποποιηθεί.  
Directivas, conforme alteração em.  
Direktiver, med senere ændringer.

Direktiv, med foretagne ændringer.  
Direktiver, med foretatte endringer.  
Direktiivejä, sellaisina kuin ne ovat muutettuina.

*Note	as set out in the Technical Construction File <b>DAIKIN.TCF.015</b> and judged positively by <b>KEMA</b> according to the <b>Certificate 74736-KRQ/EMC97-4957</b> .
Hinweis	wie in der Technischen Konstruktionsakte <b>DAIKIN.TCF.015</b> aufgeführt und von <b>KEMA</b> positiv ausgezeichnet gemäß <b>Zertifikat 74736-KRQ/EMC97-4957</b> .
Remarque	tel que stipulé dans le Fichier de Construction Technique <b>DAIKIN.TCF.015</b> et jugé positivement par <b>KEMA</b> conformément au <b>Certificat 74736-KRQ/EMC97-4957</b> .
Bemerk	zoals vermeld in het Technisch Constructiedossier <b>DAIKIN.TCF.015</b> en in orde bevonden door <b>KEMA</b> overeenkomstig <b>Certificaat 74736-KRQ/EMC97-4957</b> .
Nota	tal como se expone en el Archivo de Construcción Técnica <b>DAIKIN.TCF.015</b> y juzgado positivamente por <b>KEMA</b> según el <b>Certificado 74736-KRQ/EMC97-4957</b> .
Nota	delineato nel File Tecnico di Costruzione <b>DAIKIN.TCF.015</b> e giudicato positivamente da <b>KEMA</b> secondo il <b>Certificato 74736-KRQ/EMC97-4957</b> .
Σημείωση	όπως προσδιορίζεται στο Αρχείο Τεχνικής Κατασκευής <b>DAIKIN.TCF.015</b> και κρίνεται θετικά από το <b>KEMA</b> σύμφωνα με το <b>Πιστοποιητικό 74736-KRQ/EMC97-4957</b> .
Nota	tal como estabelecido no Ficheiro Técnico de Construção <b>DAIKIN.TCF.015</b> e com o parecer positivo de <b>KEMA</b> de acordo com o <b>Certificado 74736-KRQ/EMC97-4957</b> .
Bemærk	som anført i den Tekniske Konstruktionsfil <b>DAIKIN.TCF.015</b> og positivt vurderet af <b>KEMA</b> i henhold til <b>Certifikat 74736-KRQ/EMC97-4957</b> .
Information	utrustningen är utförd i enlighet med den Tekniska Konstruktionsfilen <b>DAIKIN.TCF.015</b> som positivt intygas av <b>KEMA</b> vilket också framgår av <b>Certifikat 74736-KRQ/EMC97-4957</b> .
Merk	som det fremkommer i den Tekniske Konstruktionsfilen <b>DAIKIN.TCF.015</b> og gennem positiv bedømmelse af <b>KEMA</b> ifølge <b>Sertifikat 74736-KRQ/EMC97-4957</b> .
Huom	jotka on esitetty Teknisessä Asiakirjassa <b>DAIKIN.TCF.015</b> ja jotka <b>KEMA</b> on hyväksynyt <b>Sertifikaatin 74736-KRQ/EMC97-4957</b> mukaisesti.

**DAIKIN**

  
Hitoshi Jinno  
Manager Quality Control Department  
Shiga, 1st of Jan 2002

**DAIKIN INDUSTRIES, LTD.**

Umeda Center Bldg., 4-12, Nakazaki-Nishi 2-chome,  
Kita-ku, Osaka, 530-8323 Japan

**DAIKIN INDUSTRIES, LTD.**

Head office:  
Umeda Center Bldg., 4-12, Nakazaki-Nishi 2 chome,  
Kita-ku, Osaka, 530-8323 Japan



Tokyo office:  
Shinjuku Sumitomo Bldg., 6-1 Nishi-Shinjuku  
2-chome, Shinjuku-ku, Tokyo, 163-0235 Japan

**DAIKIN EUROPE NV**




Zandvoordestraat 300, B-8400 Oostende, Belgium

# Safety Precautions

- Read these Safety Precautions carefully to ensure correct installation.
- This manual classifies the precautions into WARNINGS and CAUTIONS.  
Be sure to follow all the precautions below: they are all important for ensuring safety.




 WARNINGS	Failure to follow any of WARNING is likely to result in such grave consequences as death or serious injury.
 CAUTIONS	Failure to follow any of CAUTION may in some cases result in grave consequences.

- The following safety symbols are used throughout this manual:


	Be sure to observe this instruction.		Be sure to establish an earth connection.		Never attempt.
---	--------------------------------------	---	---	---	----------------

- After completing installation, test the unit to check for installation errors. Give the user adequate instructions concerning the use and cleaning of the unit according to the Operation Manual.

## WARNINGS




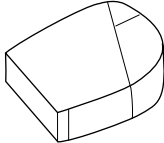
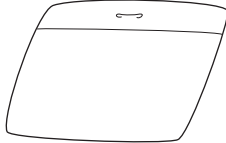
- Installation should be left to the dealer or another professional.  
Improper installation may cause water leakage, electrical shock, or fire.
- Install the air conditioner according to the instructions given in this manual.  
Incomplete installation may cause water leakage, electrical shock, or fire.
- Be sure to use the supplied or specified installation parts.  
Use of other parts may cause the unit to come to lose, water leakage, electrical shock, or fire.
- Install the air conditioner on a solid base that can support the unit's weight.  
An inadequate base or incomplete installation may cause injury in the event the unit falls off the base.
- Electrical work should be carried out in accordance with the installation manual and the national electrical wiring rules or code of practice.  
Insufficient capacity or incomplete electrical work may cause electrical shock or fire.
- Be sure to use a dedicated power circuit. Never use a power supply shared by another appliance.
- For wiring, use a cable long enough to cover the entire distance with no connection.  
Do not use an extension cord. Do not put other loads on the power supply, use a dedicated power circuit.  
(Failure to do so may cause abnormal heat, electric shock or fire.)
- Use the specified types of wires for electrical connections between the indoor and outdoor units.  
Firmly clamp the interconnecting wires so their terminals receive no external stresses. Incomplete connections or clamping may cause terminal overheating or fire.
- After connecting interconnecting and supply wiring be sure to shape the cables so that they do not put undue force on the electrical covers or panels.  
Install covers over the wires. Incomplete cover installation may cause terminal overheating, electrical shock, or fire.
- When installing or relocating the system, be sure to keep the refrigerant circuit free from substances other than the specified refrigerant (R-410A), such as air.  
(Any presence of air or other foreign substance in the refrigerant circuit causes an abnormal pressure rise or rupture, resulting in injury.)
- The unit is out of reach of children—at least 2.3m above the floor.
- If any refrigerant has leaked out during the installation work, ventilate the room.  
(The refrigerant produces a toxic gas if exposed to flames.) 
- After all installation is complete, check to make sure that no refrigerant is leaking out.  
(The refrigerant produces a toxic gas if exposed to flames.) 
- Be sure to establish an earth. Do not earth the unit to a utility pipe, arrester, or telephone earth.  
In complete earth may cause electrical shock. A high surge current from lightning or other sources may cause damage to the air conditioner. 
- An earth leakage circuit breaker may be required depending on site condition to prevent electrical shock.  
Failure to do so may cause electrical shock.

## CAUTIONS

- Do not install the air conditioner in a place where there is danger of exposure to inflammable gas leakage.  
If the gas leaks and builds up around the unit, it may catch fire. 
- Establish drain piping according to the instructions of this manual.  
Inadequate piping may cause flooding.
- Note for installing the outdoor unit. (For heat pump model only.)  
In cold area where the outside air temperature keep below or around freezing-point for a few days, the outdoor unit's drain may freeze.  
If so, it is recommended to install an electric heater in order to protect drain from freezing.
- Tighten the flare nut according to the specified method such as with a torque wrench.  
If the flare nut is tightened too hard, the flare nut may crack after a long time and cause refrigerant leakage.

# Accessories

Accessories supplied with the outdoor unit:
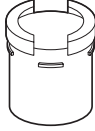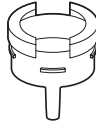
<p>(A) Drain socket</p>  <p>There is on the bottom packing case.</p>	1	<p>(B) Drain cap</p>  <p>There is on the bottom packing case.</p>	2	<p>(C) Drain receiver</p>  <p>There is on the bottom packing case.</p>	3
<p>(D) Reducer assy</p>  <p>There is on the bottom packing case.</p>	1	<p>(E) Screw bag</p>  <p>There is on the bottom packing case.</p>	1	<p>(F) Installation Manual</p>	1

## Precautions for Selecting the Location

### OUTDOOR UNIT

- 1) Choose a place solid enough to bear the weight and vibration of the unit, where the operation noise will not be amplified.
- 2) Choose a location where the hot air discharged from the unit or the operation noise, will not cause a nuisance to the neighbors of the user.
- 3) Avoid places near a bedroom and the like, so that the operation noise will cause no trouble.
- 4) There must be sufficient spaces for carrying the unit into and out of the site.
- 5) There must be sufficient space for air passage and no obstructions around the air inlet and the air outlet.
- 6) The site must be free from the possibility of flammable gas leakage in a nearby place. Locate the unit so that the noise and the discharged hot air will not annoy the neighbors.
- 7) Install units, power cords and inter-unit cables at least 3 meter away from television and radio sets. This is to prevent interference to images and sounds. (Noises may be heard even if they are more than 3 meter away depending on radio wave conditions.)
- 8) In coastal areas or other places with salty atmosphere of sulfate gas, corrosion may shorten the life of the air conditioner.
- 9) Since drain flows out of the outdoor unit, do not place under the unit anything which must be kept away from moisture.

### Note

Cannot be installed hanging from ceiling or stacked.

### CAUTIONS

When operating the air conditioner in a low outdoor ambient temperature, be sure to follow the instructions described below.

- 1) To prevent exposure to wind, install the outdoor unit with its suction side facing the wall.
- 2) Never install the outdoor unit at a site where the suction side may be exposed directly to wind.
- 3) To prevent exposure to wind, it is recommended to install a baffle plate on the air discharge side of the outdoor unit.
- 4) In heavy snowfall areas, select an installation site where the snow will not affect the unit.



- Construct a large canopy.
- Construct a pedestal.


Install the unit high enough off the ground to prevent burying in snow.

# Indoor/outdoor Unit Installation Drawings

For installation of the indoor units, refer to the installation manual which was provided with the units.  
(The diagram shows a wall-mounted indoor unit.)

## CAUTION

- Do not connect the embedded branch piping and the outdoor unit when only carrying out piping work without connecting the indoor unit in order to add another indoor unit later.  
Make sure no dirt or moisture gets into either side of the embedded branch piping.  
See "6 Refrigerant Piping Work" on page 7 for details.
- It is impossible to connect the indoor unit for one room only. Be sure to connect at least 2 rooms.

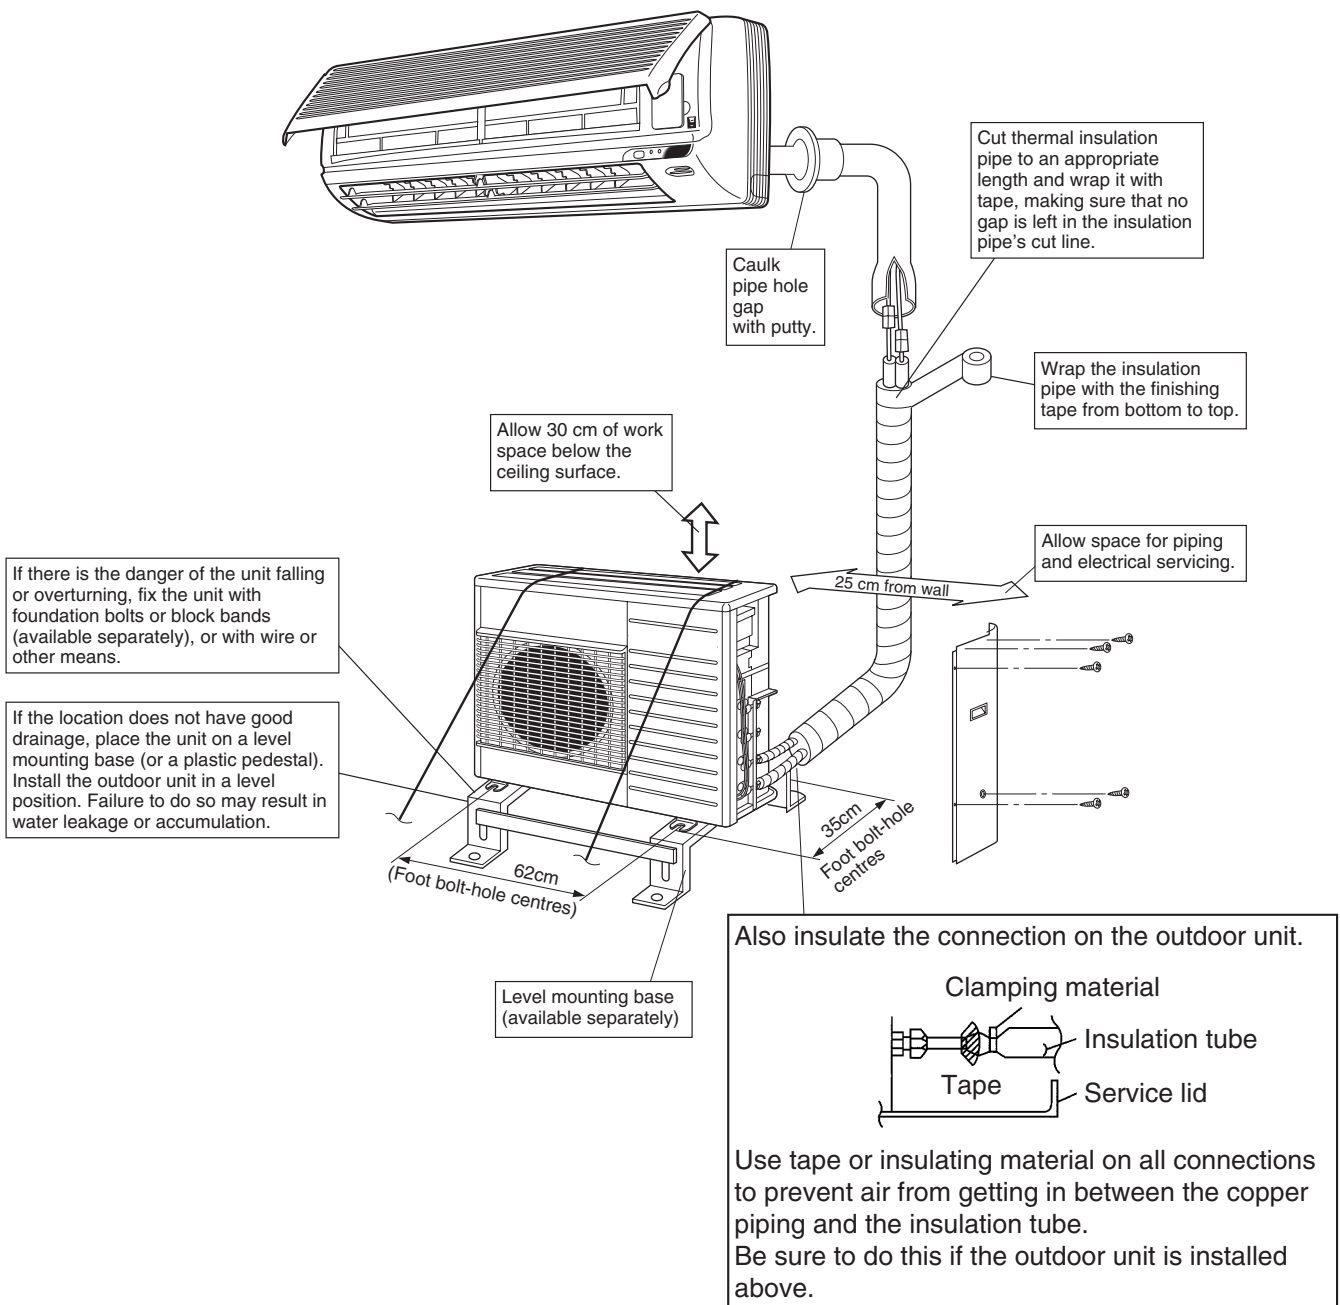

# Installation

- Install the unit horizontally.
- The unit may be installed directly on a concrete verandah or a solid place if drainage is good.
- If the vibration may possibly be transmitted to the building, use a vibration-proof rubber (field supply).

## Connections (connection port)

Install the indoor unit according to the table below, which shows the relationship between the class of indoor unit and the corresponding port.

The total indoor unit class that can be connected to this unit:

Heat pump type: 4MX80\* – Up to 13.5kW

Cooling only type: 4MK90\* – Up to 15.5kW

Port	4MX80*	4MK90*
A	25	25 , 35
B	25 , 35	# 25 , 35 , 50
C	# 25 , 35 , 50 , 60	△ 25 , 35 , 50 , 60 , 71
D	△ 25 , 35 , 50 , 60 , 71	△ 25 , 35 , 50 , 60 , 71

○ : Use a reducer to connect pipes.

# : Use No. 2 and 4 reducers

△ : Use No. 5 and 6 reducers

□ : Use No. 1 and 3 reducers


Refer to "How to use Reducer" on page 8 for information on reducer numbers and their shapes.

# Indoor/Outdoor Unit Installation


## Outdoor Unit Installation Guidelines

- Where a wall or other obstacle is in the path of outdoor unit's intake or exhaust airflow, follow the installation guidelines below.
- For any of the below installation patterns, the wall height on the exhaust side should be 1200 mm or less.


Wall facing one side

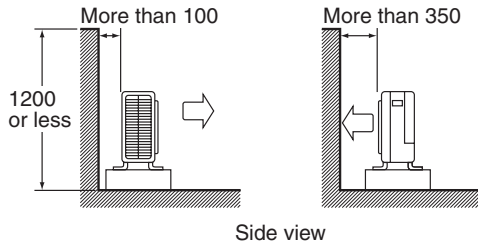

Walls facing two sides

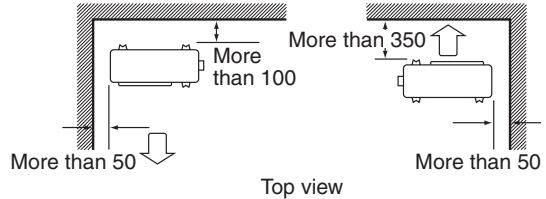

Walls facing three sides

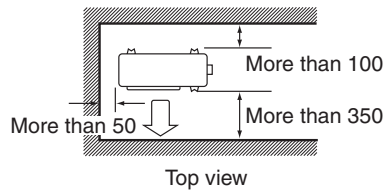


Unit: mm


## Selecting a location for installation of the indoor units

- The maximum allowable length of refrigerant piping, and the maximum allowable height difference between the outdoor and indoor units, are listed below.  
(The shorter the refrigerant piping, the better the performance. Connect so that the piping is as short as possible. Shortest allowable length per room is 3 m.)

Outdoor unit capacity class	4MX80, 4MK90
Piping to each indoor unit	25m max.
Total length of piping between all units	70m max.

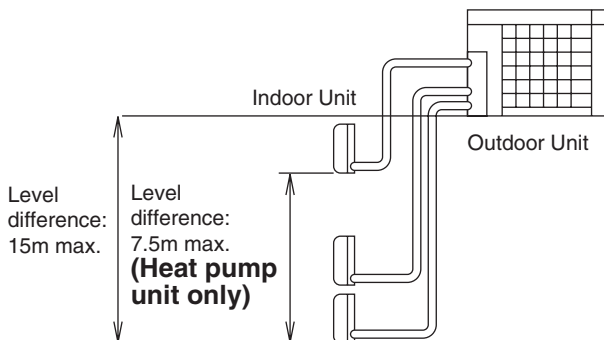

If the outdoor unit is positioned higher than the indoor units.

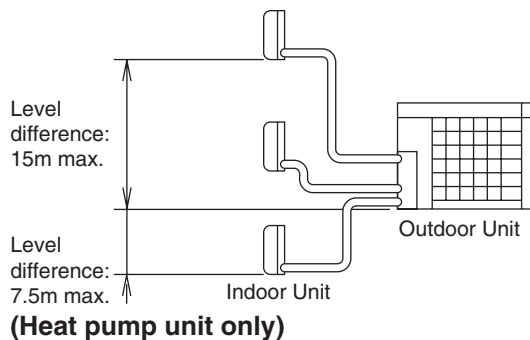

If the outdoor unit is positioned otherwise.  
(If lower than one or more indoor units)



# Outdoor Unit


## 1 Installing Outdoor Unit

- When installing the outdoor unit, refer to “Precautions for Selecting the Location” and the “Indoor/outdoor Unit Installation Drawings.”
- If drain work is necessary, follow the procedures below.

## 2 Drain Work

- Use drain plug for drainage.
- If the drain port is covered by a mounting base or floor surface, place additional foot bases of at least 100 mm in height under the outdoor unit's feet.
- In cold areas, do not use a drain hose with the outdoor unit. (Otherwise, drain water may freeze, impairing heating performance.)


1. Insert drain receiver (C) onto drain socket (A) and drain cap (B) beyond 4 projections around drain socket and drain cap.
2. Insert drain socket and drain caps into their matching drain hole ; Drain socket (A) into drain hole I and drain caps (B) into drain hole II and III. After insertion, turn them about 40° clockwise.

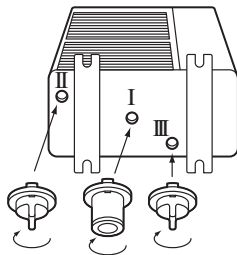

(Be sure not to insert them into wrong drain holes, or there causes water leakage.)

(View from bottom)

(A) Drain socket (B) Drain cap

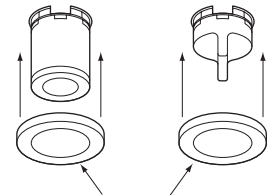

(C) Drain receiver

3. Connect vinyl hose on the market (internal diameter of 25 mm) to drain socket (A) (If the house is too long and hangs down, fix it carefully to prevent the kinks.)

### Note

If the drain holes of the outdoor unit are covered with the mounting bracket or the floor, raise the unit to provide the space of more than 100mm under the leg of the outdoor unit.

## 3 Refrigerant Piping

1. Align the centres of both flares and tighten the flare nuts 3 or 4 turns by hand. Then tighten them fully with the torque wrenches.
  - Use torque wrenches when tightening the flare nuts to prevent damage to the flare nuts and escaping gas.

Flare nut tightening torque	
Liquid pipe (O.D. : 6.4mm)	14.2-17.2N·m (144-175kgf·cm)
Gas pipe (O.D. : 9.5mm)	32.7-39.9N·m (333-407kgf·cm)
Gas pipe (O.D. : 12.7mm)	49.5-60.3N·m (505-615kgf·cm)
Gas pipe (O.D. : 15.9mm)	61.8-75.4N·m (630-769kgf·cm)

Valve cap tightening torque	Service port cap tightening torque
Liquid pipe 26.5-32.3N·m (270-330kgf·cm)	10.8-14.7N·m (110-150kgf·cm)
Gas pipe 48.1-59.7N·m (490-610kgf·cm)	

2. To prevent gas leakage, apply refrigeration machine oil on both inner and outer surfaces of the flare. (Use refrigeration oil for R-410A)

## 4 Purging Air and Checking Gas Leakage

- When piping work is completed, it is necessary to purge the air and check for gas leakage. Refer to “Purging Air and Checking Gas Leakage”.

# Outdoor Unit

## 5 Charging with Refrigerant

- If the total length of piping for all rooms exceeds the figure listed below, additionally charge with **20 g of** refrigerant (R-410A) for each additional meter of piping.

Outdoor capacity class	4MX80
Total length of piping for all rooms	40m

### For cooling only

- Cooling only models (4MK90) are chargeless. There is no need to charge with refrigerant.


### CAUTION

Even though the shut-off valve is fully closed, the refrigerant may slowly leak out; do not leave the flare nut removed for a long period of time.

## 6 Refrigerant Piping Work

### Cautions on Pipe Handling

- Protect the open end of the pipe against dust and moisture.
- All pipe bends should be as gentle as possible. Use a pipe bender for bending.  
(Bending radius should be 30 to 40 mm or larger.)

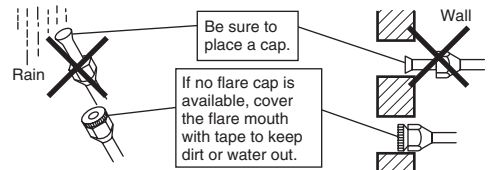


### Selection of Copper and Heat Insulation materials

When using commercial copper pipes and fittings, observe the following:

- Insulation material: Polyethylene foam  
Heat transfer rate: 0.041 to 0.052kW/mK (0.035 to 0.045 kcal/mh°C)  
Refrigerant gas pipe's surface temperature reaches 110°C max.  
Choose heat insulation materials that will withstand this temperature.
- Be sure to insulate both the gas and liquid piping and to provide insulation dimensions as below.

Gas pipe	Gas pipe insulation
O.D.: 9.5mm, 12.7mm / Thickness:0.8mm	I.D.: 12 – 15mm / Thickness:13mm min.
O.D.: 15.9mm / Thickness:1.0mm	I.D.: 16 – 20mm / Thickness:13mm min.
Liquid pipe	Liquid pipe insulation
O.D.: 6.4mm / Thickness:0.8mm	I.D.: 8 – 10mm / Thickness:10mm min.

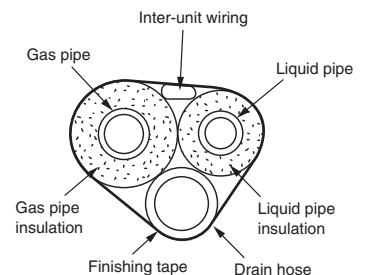

- Use separate thermal insulation pipes for gas and liquid refrigerant pipes.

## 7 Flaring the Pipe End


1. Cut the pipe end with a pipe cutter.
2. Remove burrs with the cut surface facing downward so that the chips do not enter the pipe.
3. Put the flare nut on the pipe.
4. Flare the pipe.
5. Check that the flaring is properly made.




Set exactly at the position shown below.			
A	Flaring		Conventional flare tool
	Flare tool for R-410A	Clutch-type	
A	Clutch-type	0 ~ 0.5 mm	1.0 ~ 1.5 mm
			1.5 ~ 2.0 mm

### WARNING

Do not use mineral oil on flared part.  
Prevent mineral oil from getting into the system as this would reduce the lifetime of the units.  
Never use piping which has been used for previous installations. Only use parts which are delivered with the unit.  
Do never install a drier to this R-410A unit in order to guarantee its lifetime.  
The drying material may dissolve and damage the system.  
Incomplete flaring may cause refrigerant gas leakage.

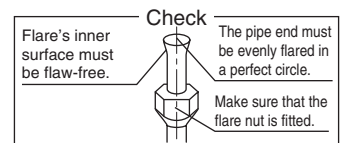


# How to Use Reducers

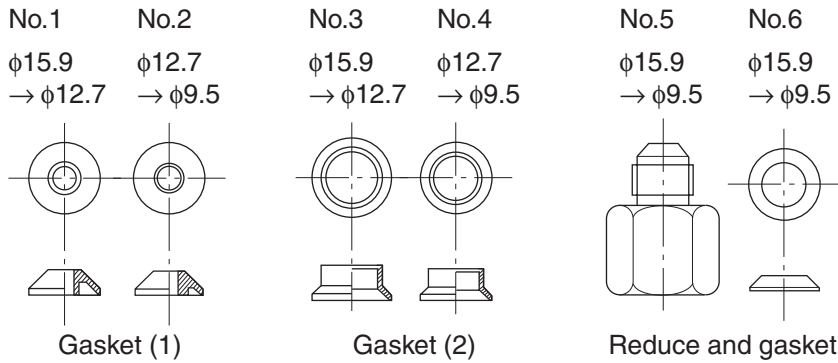


Use the reducers supplied with the unit as described below.


1. Connecting a pipe of φ12.7 to a gas pipe connection port for φ15.9:

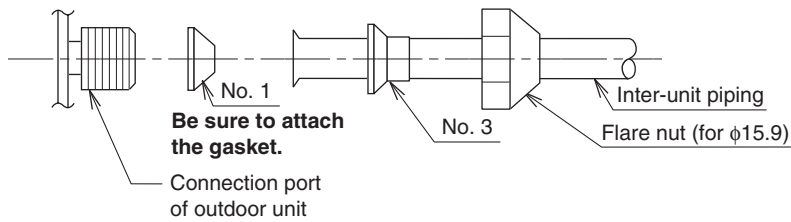

2. Connecting a pipe of φ9.5 to a gas pipe connection port for φ15.9:

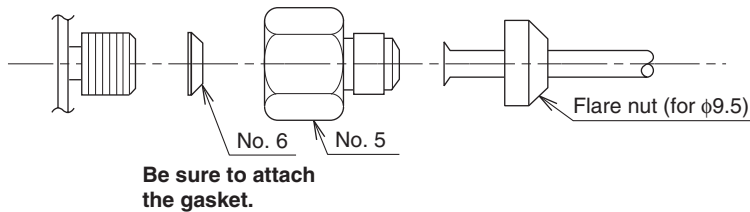

3. Connecting a pipe of φ9.5 to a gas pipe connection port for φ12.7:

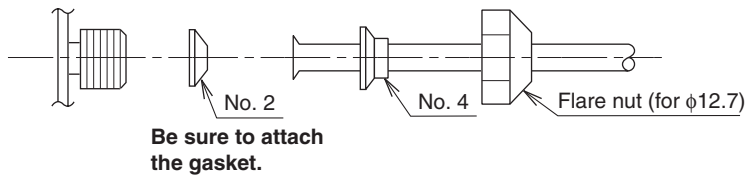

- When using the reducer packing shown above, be careful not to overtighten the nut, or the smaller pipe may be damaged. (about 2/3 - 1 the normal torque)
- Apply a coat of refrigeration oil to the threaded connection port of the outdoor unit where the flare nut comes in.
- Use an appropriate wrench to avoid damaging the connection thread by overtightening the flare nut.

Flare nut tightening torque	
Gas pipe (O.D. : 9.5mm)	32.7–39.9N·m (333–407kgf·cm)
Gas pipe (O.D. : 12.7mm)	49.5–60.3N·m (505–615kgf·cm)
Gas pipe (O.D. : 15.9mm)	61.8–75.4N·m (630–769kgf·cm)

# Purging Air and Checking Gas Leakage

## WARNING

Do not mix any substance other than the specified refrigerant (R-410A) into the refrigeration cycle.

## WARNING

Refrigerant gas leaks during air purging, ventilate the room as soon as possible.

To prevent air pollution, a vacuum pump should be used for air purging wherever possible.

## WARNING

Use a vacuum pump for R-410A exclusively. Using the same vacuum pump for different refrigerants may damage the vacuum pump or the unit.

- If using additional refrigerant, perform air purging from the refrigerant pipes and indoor unit using a vacuum pump, then charge additional refrigerant.
- Use a hexagonal wrench (4 mm) to operate the shut-off valve rod.
- All refrigerant pipe joints should be tightened with a torque wrench at the specified tightening torque.

(1) Connect projection side (on which worm pin is pressed) of charging hose (which comes from gauge manifold) to gas shut-off valve's service port.



(2) Fully open gauge manifold's low-pressure valve (Lo) and completely close its high-pressure valve (Hi). (High-pressure valve subsequently requires no operation.)



(3) Apply vacuum pumping. Check that the compound pressure gauge reads  $-0.1$  MPa ( $-76$  cm Hg). Evacuation for **at least 1 hour** is recommended.



(4) Close gauge manifold's low-pressure valve (Lo) and stop vacuum pump. (Leave as is for 4-5 minutes and make sure the coupling meter needle does not go back. If it does go back, this may indicate the presence of moisture or leaking from connecting parts. Repeat steps 2 – 4 after checking all connecting parts and slightly loosening the nuts.)



(5) Remove covers from liquid shut-off valve and gas shut-off valve.



(6) Turn the liquid shut-off valve's rod 90 degrees counterclockwise with a hexagonal wrench to open valve. Close it after 5 seconds, and check for gas leakage. Using soapy water, check for gas leakage from indoor unit's flare and outdoor unit's flare and valve rods. After the check is complete, wipe all soapy water off.



(7) Disconnect charging hose from gas shut-off valve's service port, then fully open liquid and gas shut-off valves. (Do not attempt to turn valve rod beyond its stop.)




(8) Tighten valve lids and service port caps for the liquid and gas shut-off valves with a torque wrench at the specified torques. See "3 Refrigerant Piping" on page 6 for details.

# Pump Down Operation


In order to protect the environment, be sure to pump down when relocating or disposing of the unit.

- (1) Remove the valve lid from liquid shut-off valve and gas shut-off valve.
- (2) Carry out forced cooling operation.
- (3) After five to ten minutes, close the liquid shut-off valve with a hexagonal wrench.
- (4) After two to three minutes, close the gas shut-off valve and stop forced cooling operation.

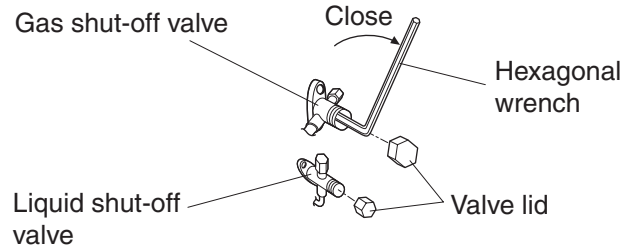

## Forced operation

- (1) Turn the Operation Mode switch (SW2) to "COOL."
- (2) Press the Forced Operation switch (SW1) to begin forced cooling. Press the Forced Operation switch (SW1) again to stop forced cooling.

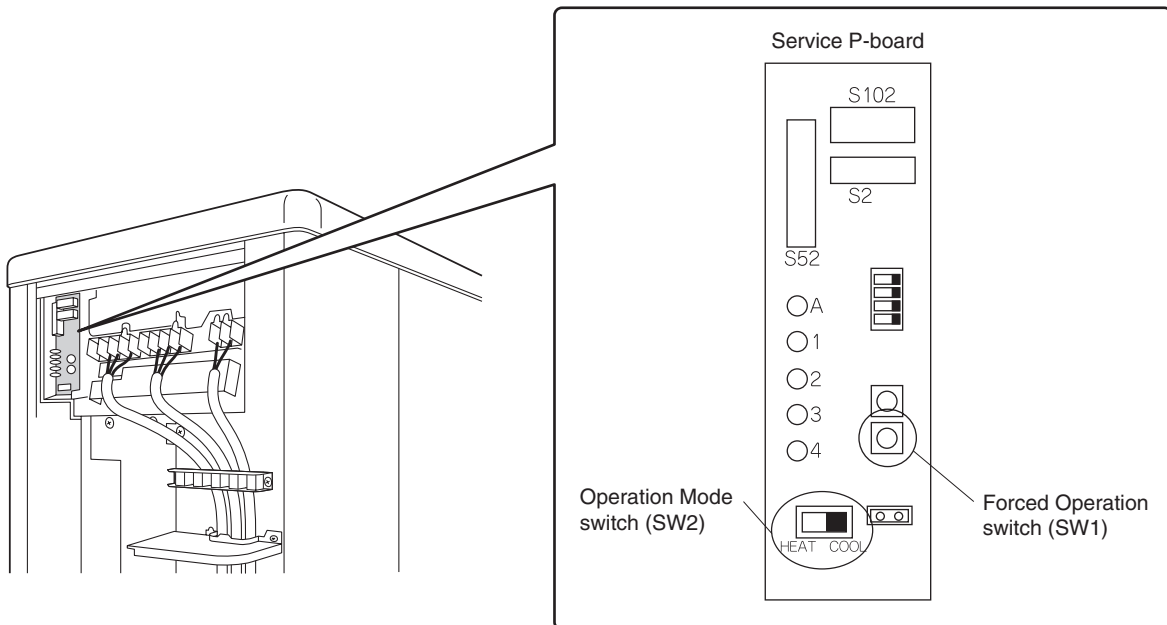


# Wiring

## ⚠ WARNING

Do not use tapped wires, stand wires, extensioncords, or starburst connections, as they may cause overheating, electrical shock, or fire.


- Do not turn ON the safety breaker until all work is completed.

- Strip the insulation from the wire (20 mm).
- Connect the connection wires between the indoor and outdoor units **so that the terminal numbers match**. Tighten the terminal screws securely. We recommend a flathead screwdriver be used to tighten the screws. The screws are packed with the terminal board.

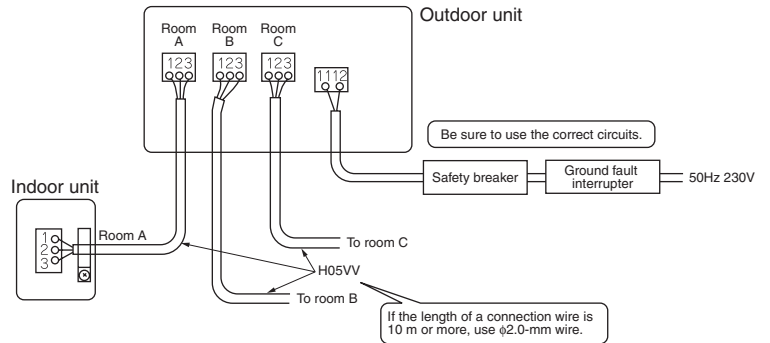


## ⚠ CAUTION

When connecting the connection wires to the terminal board using a single core wire, be sure to perform curling. Problems with the work may cause heat and fires.

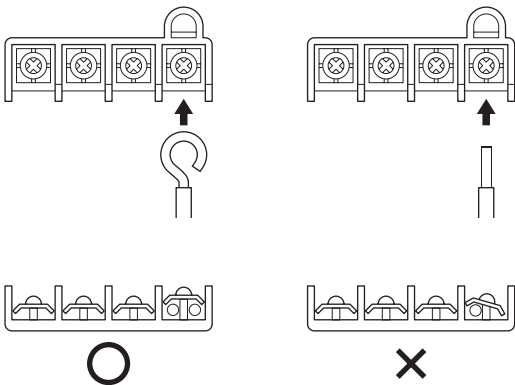


- Pull the wire and make sure that it does not disconnect. Then fix the wire in place with a wire stop.

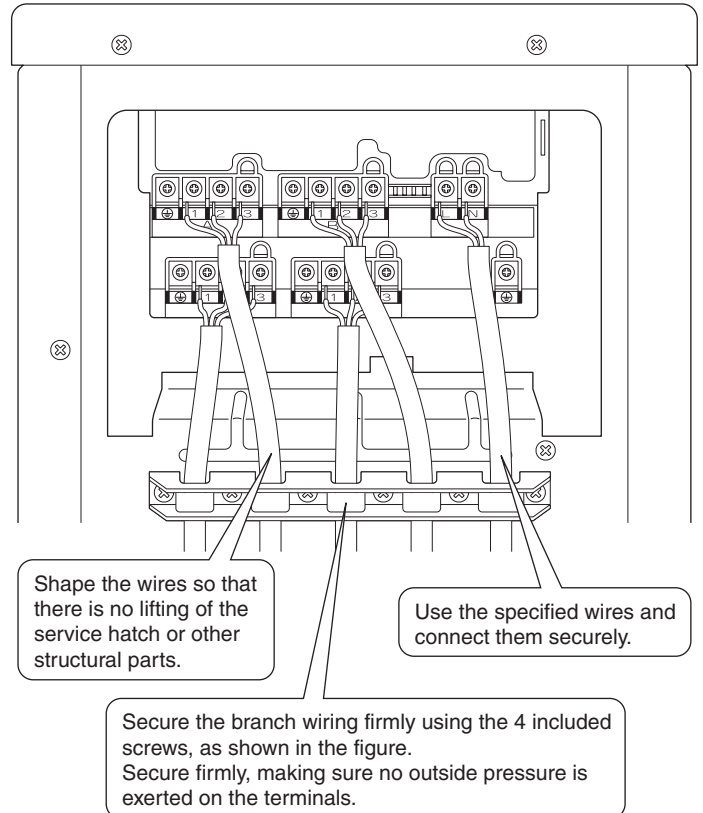

# Wiring

For 4MX and 4MK, follow the procedure below to connect the wires.  
(When connecting 3 or more rooms)

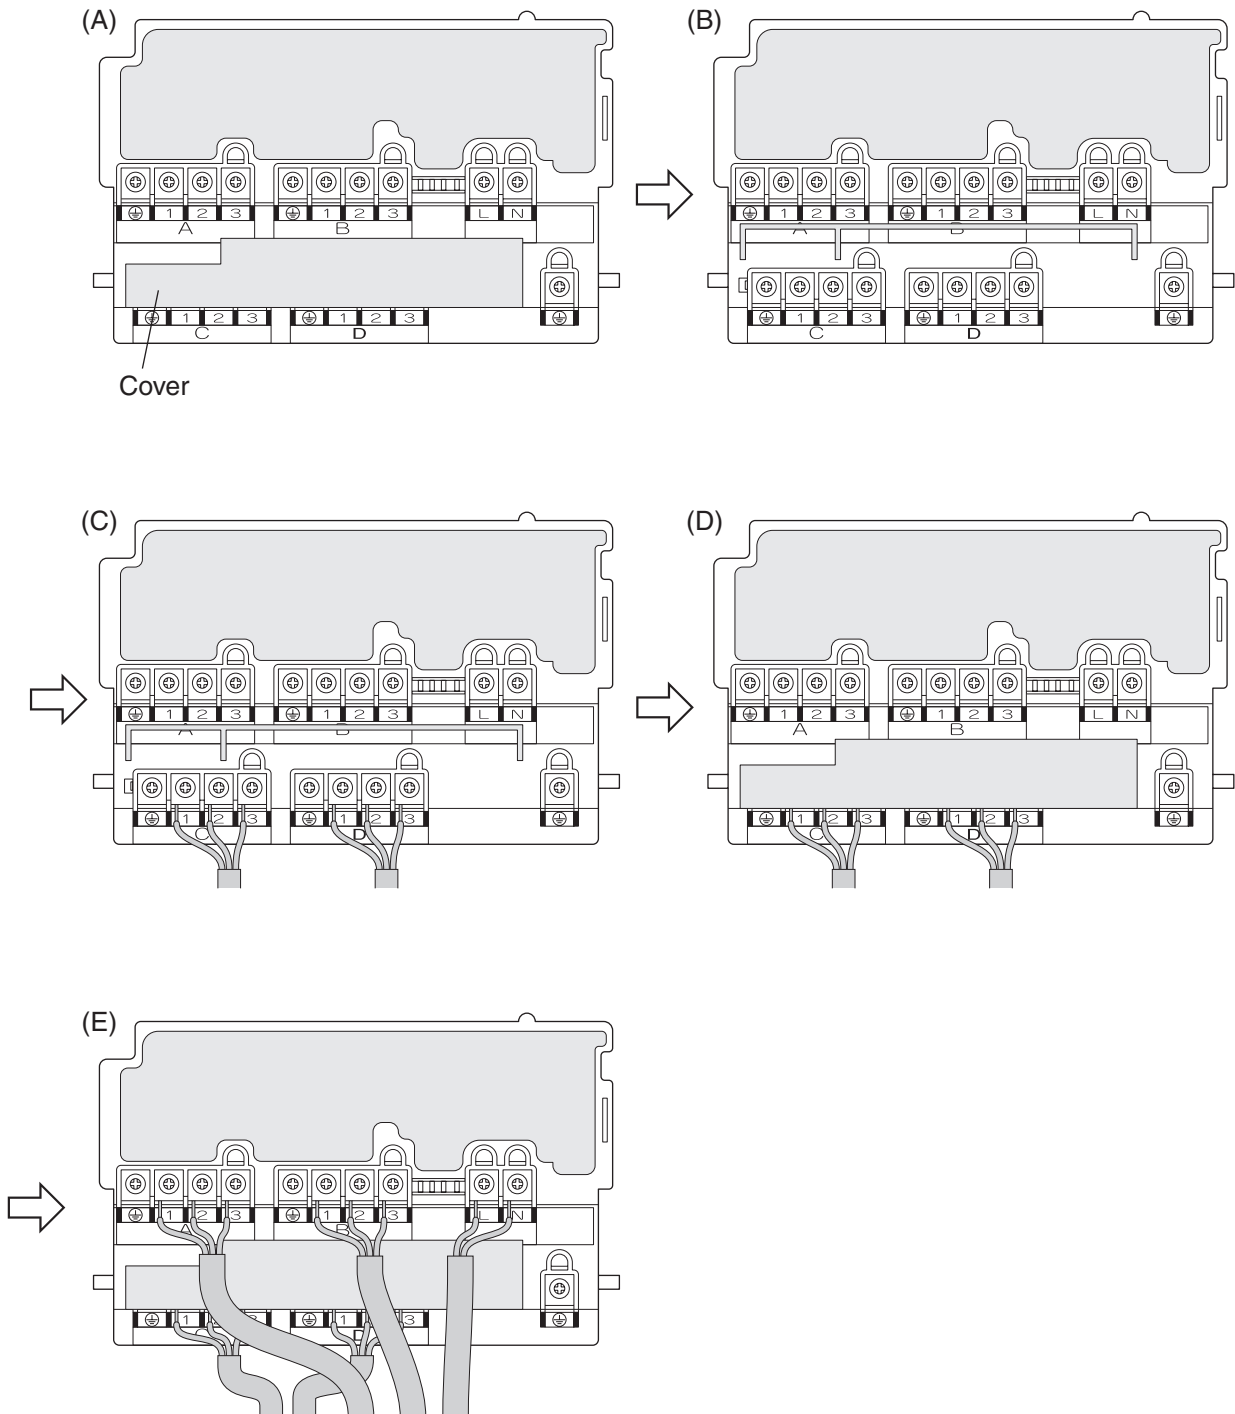

- (1) Remove the service lid, and it should be as in Figure (A).  
First push up the cover as shown in Figure (B), then connect room C, D (Figure (C)).  
Be sure to connect from room C, D.
- (2) After room C and D are connected, replace the cover (Figure (D)).
- (3) Connect room A, B and power supply wires (Figure (E)).

## Earth

This air conditioner must be earthed.  
For earthing, follow the applicable local standard for electrical installations.

# Priority Room Setting

- To use Priority Room Setting, initial settings must be made when the unit is installed. Explain the Priority Room Setting, as described below, to the customer, and confirm whether or not the customer wants to use Priority Room Setting. Setting it in the guest and living rooms is convenient.

## About the Priority Room Setting function

The indoor unit for which Priority Room Setting is applied takes priority in the following cases.

### (1) Operation mode priority

The operation mode of the indoor unit which is set for Priority Room Setting takes priority. If the set indoor unit is operating, all other indoor units do not operate and enter standby mode, according to the operation mode of the set indoor unit.

### (2) Priority during high-power operation

If the indoor unit which is set for Priority Room Setting is operating at high power, the capabilities of other indoor units will be somewhat reduced. Power supply gives priority to the indoor unit which is set for Priority Room Setting.

### (3) Quiet operation priority


Setting the indoor unit to quiet operation will make the outdoor unit run quietly.

## Setting procedure


Slide the switch to the ON side for the switch that corresponds to the piping connected to the indoor unit to be set. (In the figure below, it is room A.)

Once the settings are complete, reset the power.

**Be sure to only set one room**

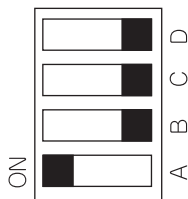

Service P-board

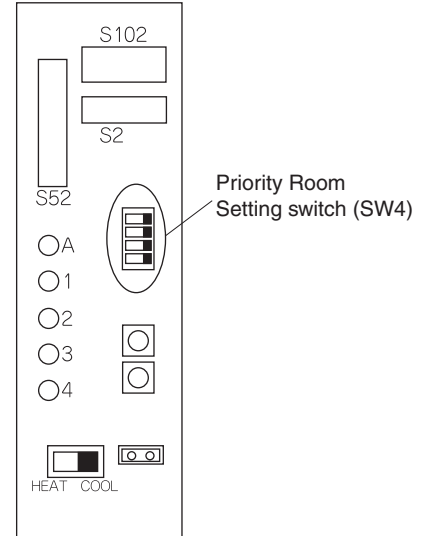



# Night Quiet Mode setting

- If Night Quiet Mode is to be used, initial settings must be made when the unit is installed.  
Explain Night Quiet Mode, as described below, to the customer, and confirm whether or not the customer wants to use Night Quiet Mode.

## About Night Quiet Mode



The Night Quiet Mode function reduces operating noise of the outdoor unit at nighttime. This function is useful if the customer is worried about the effects of the operating noise on the neighbors. However, if Night Quiet Mode is running, cooling/heating capacity will be saved.

### Setting procedure

Remove the SW5 jumper switch.  
Once the settings are complete, reset the power.


#### Note

Install the removed jumper switch as described below. This switch will be needed to later disable this setting.

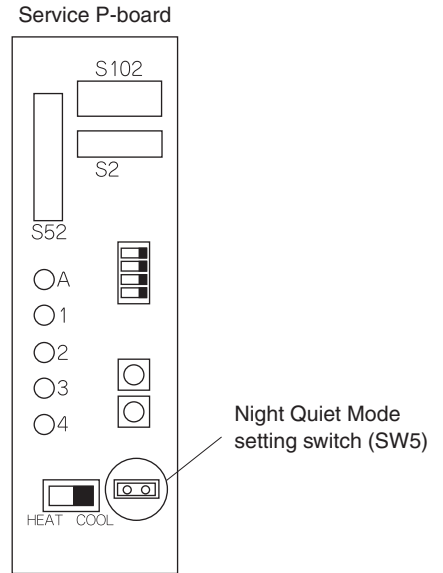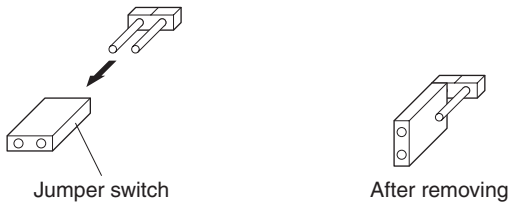

# COOL/ HEAT mode lock <S15> (Heat Pump units only)

- Use the S15 connector to set the unit to only cool or heat.  
Setting to only cool (C): short-circuit pins 1 and 3 of the connector <S15>  
Setting to only heat (H): short-circuit pins 3 and 5 of the connector <S15>  
The following specifications apply to the connector housing and pins.  
JST products      Housing:    VHR-5N  
                         Pin:        SVH-21T-1,1  
Note that forced operation is also possible in COOL/HEAT mode.

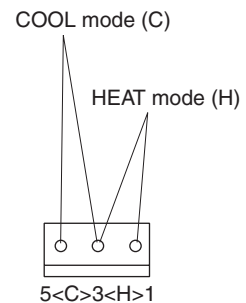


# Test Run and Final Check

- Before starting the test run, measure the voltage at the primary side of the safety breaker. Check that it is 230 V.
- Check that all liquid and gas shut-off valves are fully open.
- Check that piping and wiring all match. The wiring error check can be conveniently used for underground wiring and other wiring that cannot be directly checked.

## Wiring error check

- This product is capable of automatic correction of wiring error.

Press the “wiring error check switch” on the outdoor unit service monitor print board. However, the wiring error check switch will not function for one minute after the safety breaker is turned on, or depending on the outside air conditions (See Note 2.). Approximately 10 – 15 minutes after the switch is pressed, the errors in the connection wiring will be corrected.

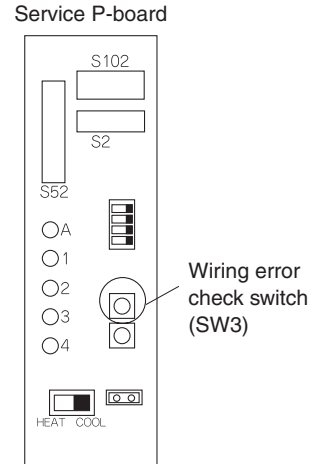


The service monitor LEDs indicate whether or not correction is possible, as shown in the table below. For details about how to read the LED display, refer to the service guide.


If self-correction is not possible, check the indoor unit wiring and piping in the usual manner.

LED	1	2	3	4	Message
Status	All Flashing				Automatic correction impossible
	Flashing		One after another		Automatic correction completed
	☀ (One or more of LEDs 1 to 4 are ON)				Abnormal stop [Note. 4]

### Wiring correct example

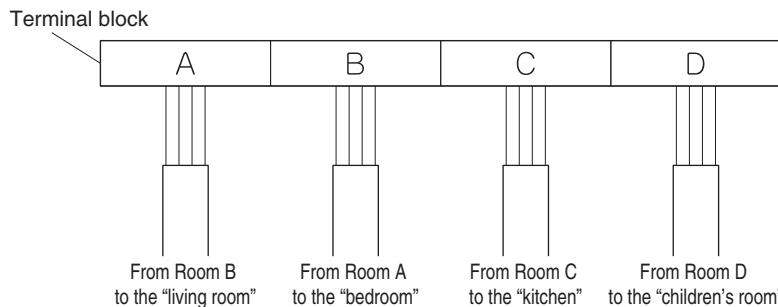

\* The figure at left shows branch wiring.

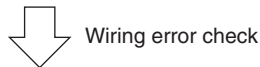

LED lighting sequence after a wiring correction.

Order of LED flashing: 2 → 1 → 3 → 4

### Notes

- (1) For two rooms, LED 3 and 4 are not displayed, and for three rooms, LED 4 is not displayed.
- (2) If the outside air temperature is **5 °C or less**, the wiring error check function will not operate.
- (3) After wiring error check operation is completed, LED indication will continue until ordinary operation starts. This is normal.
- (4) Follow the product diagnosis procedures. (Check the nameplate on the underside of the shut-off valve.)

# Test Run and Final Check

- To test cooling, set for the lowest temperature. To test heating, set for the highest temperature. (Depending on the room temperature, only heating or cooling (but not both) may be possible.)
- After the unit is stopped, it will not start again (heating or cooling) for approximately 3 minutes.
- During the test run, first check the operation of each unit individually. Then also check the simultaneous operation of all indoor units.  
Check both heating and cooling operation.
- After running the unit for approximately 20 minutes, measure the temperatures at the indoor unit inlet and outlet. If the measurements are above the values shown in the table below, then they are normal.

	Cooling	Heating
Temperature difference between inlet and outlet	Approx. 8 °C	Approx. 20 °C

(When running in one room)

- During cooling operation, frost may form on the gas shut-off valve or other parts. This is normal.
- Operate the indoor units in accordance with the included operation manual. Check that they operate normally.

## Items to check

Check item	Consequences of trouble	Check
Are the indoor units installed securely?	Falling, vibration, noise	
Has an inspection been made to check for gas leakage?	No cooling, no heating	
Has complete thermal insulation been done (gas pipes, liquid pipes, indoor portions of the drain hose extension)?	Water leakage	
Is the drainage secure?	Water leakage	
Are the ground wire connections secure?	Danger in the event of a ground fault	
Are the electric wires connected correctly?	No cooling, no heating	
Is the wiring in accordance with the specifications?	Operation failure, burning	
Are the inlets/outlets of the indoor and outdoor units free of any obstructions? Are the shut-off valves open?	No cooling, no heating	
Do the marks match (room A, room B) on the wiring and piping for each indoor unit?	No cooling, no heating	
Is the priority room setting set for 2 or more rooms?	The priority room setting will not function.	

## ATTENTION

- Have the customer actually operate the unit while looking at the manual included with the indoor unit. Instruct the customer how to operate the unit correctly (particularly cleaning of the air filters, operation procedures, and temperature adjustment).
- Even when the air conditioner is not operating, it consumes some electric power. If the customer is not going to use the unit soon after it is installed, turn OFF the breaker to avoid wasting electricity.
- If additional refrigerant has been charged because of long piping, list the amount added on the nameplate on the reverse side of the shut-off valve cover.